



# User's manual



# Important Notice

No warranty of any kind is made in regard to this material, including, but not limited to, implied warranties of merchantability or fitness for a particular purpose. We are not liable for any errors contained herein or incidental or consequential damages in connection with furnishing, performance or use of this material.

No part of this document may be reproduced, transmitted, stored in a retrieval system, transcribed, or translated into any language or computer language in any form or by any means electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without express written consent and authorization.

We reserve the right to make changes in product design without reservation and without notification. The material in this guide is for information only and is subject to change without notice. For the latest revision please contact your distributor.

All trademarks mentioned herein, registered or otherwise, are the properties of their various respective owners.

## Revision History

Changes to the original manual are listed below:

Version	Date	Description of Version
1.0	July. 08, 2011	Initial release
1.1	Sept. 20, 2011	Deleted beeper volume via function button section
1.2	Feb. 4, 2012	Added dimension

Copyright © 2012. All rights reserved.

## Printing Guidance

This manual is in A5 size. Please double check your printer setting before printing it out.

## Laser Safety

The Compact Hands-free Omnidirectional Laser Scanner complies with safety standard IEC 60825 for a Class I laser product. It also complies with CDRH as applicable to a Class IIa laser product. Avoid long term staring into direct laser light.

**Radiant Energy:** The Miniature Dual-Laser Omnidirectional Hands-free Scanner uses two low-power visible laser diodes operating at 650nm in an opto-mechanical scanner resulting in less than 3.9 $\mu$ W radiated power as observed through a 7mm aperture and averaged over 10 seconds.

Do not attempt to remove the protective housing of the scanner, as unscanned laser light with a peak output up to 0.8mW would be accessible inside.

**Laser Light Viewing:** The scan window is the only aperture through which laser light may be observed from this product. A failure of the scanner motor, while the laser diode continues to emit a laser beam, may cause emission levels to exceed those for safe operation. The scanner has safeguards to prevent this occurrence. If, however, a stationary laser beam is emitted, the failing scanner should be disconnected from its power source immediately.

**Adjustments:** Do not attempt any adjustments or alteration of this product. Do not remove the protective housing of the scanner. There are no user-serviceable parts inside.

**Caution:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser light exposure.

**Optical:** The use of optical instruments with this product will increase the eye hazard. Optical instruments include binoculars, magnifying glasses, and microscopes but do not include normal eye glasses worn by the user.

## For CE-Countries

This scanner is in conformity with CE standards. Please note that an approved, CE-marked power supply unit should be used in order to maintain CE conformance.

# Table of Contents

<b>IMPORTANT NOTICE .....</b>	<b>I</b>
<b>INSTRUCTION .....</b>	<b>1</b>
UNPACKING .....	2
OUTLINE .....	3
<i>Scanner</i> .....	3
<i>Stand</i> .....	4
<b>CONNECTING .....</b>	<b>5</b>
POWER .....	5
VERIFYING SCANNER OPERATION .....	5
CONNECTING TO THE HOST .....	6
<b>SETTING UP THE SCANNER .....</b>	<b>7</b>
SCAN TEST .....	7
SET UP .....	7
<b>OPERATION .....</b>	<b>8</b>
PRESENTATION MODE .....	8
SINGLE LINE SCAN MODE .....	8
LED INDICATIONS .....	9
BEEPS .....	10
SLEEP MODE .....	10
<b>MAINTAINING THE SCANNER .....</b>	<b>11</b>
CLEANING THE SCAN WINDOW .....	11
REPLACING THE INTERFACE CABLE .....	11



# Instruction

The scanner is a compact hands-free omnidirectional laser scanner, and becomes a single-line laser scanner by pressing down a button. It is designed to suit both requirements for omnidirectional and single-line scanning. With the reserved mounting holes at the back of the scanner body, the scanner transforms to a scanning module to allow integration into your desirable hardware application.

The scanner is cubic designed as compact as it can be, and with its standard holder, it certainly saves the maximum counter top space. Featured with Z-scan hardware decode technology, it guarantees the real-time decode and provide the best scanning performance you could expect. The scanner surely has the performance inverse to its size.

The scanner includes key features as,

- Button switch in between omnidirectional and single-line scanning capability, ideal for increasing your operating efficiency.
- Powerful 20-line scan pattern yields
  - 1400 scans per second for omnidirectional scanning;
  - 74 scans per second for single-line scanning.
- Implement with the proprietary real-time hardware decoding technology that ensures instant recognition and decoding barcodes.
- Instant working is ready, or can be embedded into other hardware applications via mounting holes at back.
- Optional 3D turning cradle with two joints that maximize the range of adjustment.

# Unpacking

---

The handheld omnidirectional scanner package contains:

1 ea. Compact omnidirectional scanner



1 ea. Scanner stand



1 ea. Screw  
(to fix the stand when necessary)



1 ea. Adjustable stand (optional)



1 ea. Communication cable



1 ea. Power adapter  
(only for specific RS-232 cables as optional accessory)



1 ea. User's manual CD



- *If any contents are damaged or missing, please contact your dealer immediately.*
- *Please leave this user's manual within easy access for persons using the scanner.*

# Outline

## Scanner



Description	Function
Exit Window	Reads barcodes
Object Detector	Trigger and wake up scanner when presenting barcode in its range
Beeper Hole	For beep tone indication
Function Button	<p><b><u>Wake up scanner</u></b></p> <p>When the scanner enters into the sleep mode, pressing this switch can wake the scanner up. The sleep mode feature can be programmed by using the menu labels from the Programming Guide.</p> <p> ➤ The default time-out setting for the sleep mode is to switch off laser after 10 minutes, and switch off motor after 30 minutes.</p> <p>➤ When the scanner is in the sleep mode, the LED is intermittently flashing blue.</p> <p><b><u>Single -line pattern</u></b></p> <p>Pick up the scanner, press and release the trigger will activate single line scan mode</p>
Back Mount Holes	To fix the scanner with your host instrument.
Interface Cable Connection	For interface communication cable connection.

## Stand

Both stands are designed with a fixing hole. Use appropriate screws enclosed in the package to fix the stands on surface if necessary.

### Fixed Stand

Screw Size:

Sharp screw,  
M4-16.0mm,  
Cross shape




### Adjustable Stand

Screw Size:

Sharp screw,  
M5-16.0mm,  
Cross shape



Adjustable height illustrate as below,

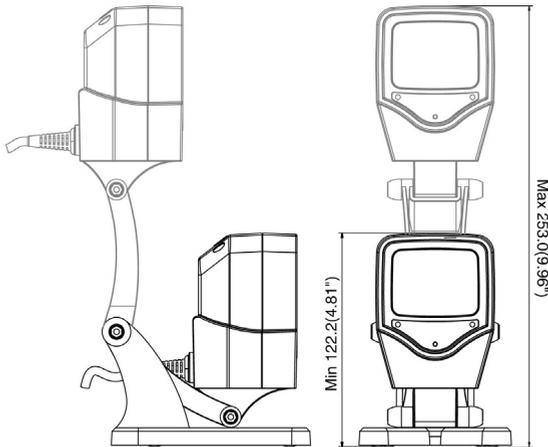

# Connecting

## Power

---

The scanner requires a minimum of 2.5W at 5 VDC power. The interface cable that comes with the scanner supports both direct power (where the scanner takes power from the host machine) and external power (that's what the supplied power adapter is for). A sufficiently robust POS system can support a scanner successfully without external power; a POS system with a barely adequate power supply may produce erratic performance (either of the POS system itself, or of the scanner, or both) when a scanner is attached. Unless you are sure your POS system can handle such loading, it is recommended that you use the supplied power adapter. When an external adapter is connected, the scanner does not take power from the host. The scanner turns on when power is supplied, and turns off when power is removed. There is no on/off switch on the scanner itself.

Use only an AC/DC power adapter approved for the scanner. Use of other power supplies may cause damage to the scanner, and void the factory warranty.

## Verifying Scanner Operation

---

Please follow the procedure below to verify scanning operation.

1. Insert the 8 pin modular plug of the Interface cable into the scanner until a firm click is heard.
2. Plug the power adapter into the jack on the interface cable if necessary.
3. Plug the AC end of the power adapter into an AC outlet, or plug the other end of cable into host if power adapter is not needed. When power is supplied, the scanner powers up, the buzzer sounds four beeps and the LED indicator glows.
4. Present a known-good test barcode to the scanner. The scanner should issue a short beep and the LED should flash red momentarily. [If the scanner is connected to a USB for this test, it should read one barcode, beep and then remain a red LED indicating light. This is normal when the USB is not connected to a live host terminal.]



*If the scanner does not produce any beeps, or produces the wrong beeps, or the LED does not light up, remove the power connection and refer to the Troubleshooting section.*

## Connecting to the Host

---

The interface cable comes with different host-end connectors, depending on the host. Follow the steps below to connect the interface cable to the host.

1. Make sure that the power of the host system is off.
2. Connect the host end of the interface cable to the appropriate connector on the host system.
3. For those cases where external power is used, plug the external AC power adapter into the jack on the interface cable.
4. Turn on the host system.

# Setting up the Scanner

In certain cases no setup is required. The scanner is either pre-programmed to suit the situation, or it automatically detects and is ready to go. In other cases the scanner must be informed about what kind of system it is connected to. This can be done in a few moments using the programming barcodes in the Programming Guide.

The programming section may be used to set a number of parameters on the scanner: communication interface type (RS-232, Keyboard, USB), beep tone, sleep mode timings, same-code delay time, enable/disable decoding of numerous code types, and more advanced things like set headers and trailers.

Individual parameters may be set at any time without affecting the other parameters.

## Scan Test

---

1. With the scanner running (LED blue) and the host system on, try to scan several known-good barcodes.
2. Check the results on the POS screen. If the scanner is reading okay, it is likely that no further setup is necessary.
3. If the POS screen does not show the expected scans, go to the Set Up section below.

## Set Up

---

1. When the scanner is powered on (LED blue), find the <Enter/Exit programming mode> barcode in the Programming Guide and present this barcode to the scanner. When the scanner gives two beeps (one low and one high) and the LED turns red, it means the scanner is in programming mode.
2. Decide which parameters are required and find their barcodes in the Programming Guide.
3. Cover unwanted codes with your hand and present the desired codes, one by one, to the scanner, the scanner beeps once as it accepts each code.
4. When done, again present the <Enter/Exit programming mode> barcode. The scanner beeps twice, once long and once short, and the LED returns to blue. The scanner has been programmed.
5. Test again with known-good barcodes. If results are good, you are done setting up. Otherwise, return to step 1 and try again.

# Operation

The scanner can read barcodes in either omnidirectional or single-line mode to accommodate different requirements. This scanner is truly omnidirectional while single-line mode is usually used for better aiming on the specific barcode on the same sheet of more than one barcode printed closely.

## Presentation Mode

---

As the scanner is on the stand, the scanner would always stay active in the Presentation Mode. In other words, the scanner always has multi-lines, and would not switch to single-line scan when the button is pressed down.



## Single Line Scan Mode

---

In this mode the scanner can emit a single line pattern for users to handheld scanning of hard-to-read or multiple barcodes on one object. Sales clerks can switch it to single line scan option simply by pressing one button.



1. Pick up the scanner.
2. Press and then release the top button and a line pattern would appear. It allows you to aim at the barcode.

Ensure the scan line crosses every bar and space of the symbol.



3. Press the button to decode and transmit the barcode, the good read beeps once.



*If the button is released, it automatically switches back to omnidirectional scan in 5 seconds. Press down again to switch to single-line scan when necessary.*

## LED Indications

A dual color red-blue LED indicates operating status as follows:

LED Status	Indication
Off	No power supplied to the scanner.
Steady blue light	The scanner is on and ready to scan.
One red flash	A barcode has been successfully decoded.
Steady red light	A barcode has been successfully decoded, but the object is not removed from the scan window.
Steady red light	The scanner is in programming mode.
Flashing blue light	The scanner is in sleep mode.
Steady purple light	This indicates the scanner has a motor or laser failure. For motor failure, a periodic beep is sounded. In this case, return the unit for repair.
Alternate flashing red and blue light	The scanner detects failing power. Please check the power supply.

## Beeps

---

A beeper gives audible feedback on scanner operation.

Beeps	Indication
One beep	A barcode has been successfully decoded.
Four beeps in series	This indicates the scanner passed the power on self-test and is operating properly.
Two beeps: low-high	The scanner has entered programming mode.
Two beeps: same tone	Scanner has returned from programming to normal mode.
Continuous tone	This is a failure indication. Return the unit for repair.

## Sleep Mode

---

After the scanner has been inactive for a period of time, the laser would automatically turn off; then the motor would also turn off and the scanner would enter the "Sleep Mode." The blue status LED blinks once as indication. To wake up the scanner, simply present an object close to the exit window, or press the trigger button.



The scanner includes a motion sensor that detects activity in front of the scan window. The detecting distance is up to about 15cm (6 inches) from the scan window.

# Maintaining the Scanner

The scanner is designed for long-term trouble-free operation and rarely requires any maintenance. Only an occasional cleaning of the scanner window is necessary in order to remove dirt and fingerprints.

## Cleaning the Scan Window

---

Wipe the scan window with a soft lint-free cloth and a non-abrasive cleaner to avoid scratching and damaging the scan window. The scan window may be cleaned while the scanner is running.


## Replacing the Interface Cable

---

The standard interface cable is attached to the scanner with a 10-pin modular connector. When the connector is properly seated, it is secured in the scanner by a flexible retention tab. The cable is designed to be field replaceable. Replacement cables can be obtained from your authorized distributor.

Take the following steps to replace the cable:

1. Make sure that the power of your computer is switched off, and if a power adapter is used, disconnect it from the scanner cable.
2. Disconnect the old scanner cable from the computer system.
3. Press down at where indicated below, and gently pull out the cable.
4. Insert the new interface cable into the bottom of the scanner until it clicks.
5. Plug the new cable into the host.
6. If a power adapter is used, plug the power adapter into the jack on the interface cable.

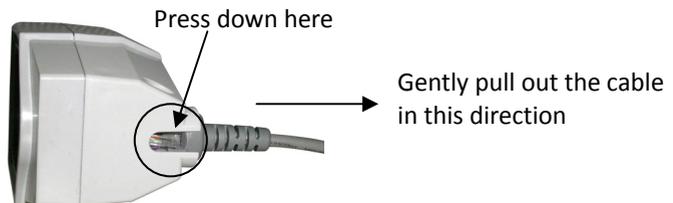

## Dimensions

