

FUZZYSCAN

ON-COUNTER SCANNER

Programming Manual

International Edition, Rev. A1



cino

Revision History

Rev. No.	Released Date	Description
Rev. A1	Feb. 1, 2021	❖ Initial Release

© Copyright Cino Group

© Copyright PC Worth International Co., Ltd

Cino makes no warranty of any kind with regard to this publication, including, but not limited to, the implied warranty of merchantability and fitness for any particular purpose. Cino shall not be liable for errors contained herein or for incidental consequential damages in connection with the furnishing, performance, or use of this publication. This publication contains proprietary information that is protected by copyright. All rights are reserved. No part of this publication may be photocopied, reproduced or translated into any language, in any forms, in an electronic retrieval system or otherwise, without prior written permission of Cino. All product information and specifications shown in this document may be changed without prior notice.

Warranty

Cino warrants its products against defects in workmanship and materials from the date of shipment, provided that the product is operated under normal and proper conditions. The warranty provisions and durations are furnished by different warranty programs. The above warranty does not apply to any product which has been (i) misused; (ii) damaged by accident or negligence; (iii) modified or altered by the purchaser or other party; (iv) repaired or tampered by unauthorized representatives; (v) operated or stored beyond the specified operational and environmental parameters; (vi) applied software, accessories or parts are not supplied by Cino; (vii) damaged by circumstances out of Cino's control, such as, but not limited to, lightning or fluctuation in electrical power. Any defective product must follow the warranty program and RMA procedures to return Cino for inspection.

Regulatory

All Cino products are designed, manufactured, and labeled to be complied with local regulations and rules of the place they are sold. For details of product documentation, please visit our website at www.cino.com.tw.



LED Eye Safety

Table of Contents

CONFIGURING YOUR SCANNER	8
Barcode Programming Manual	8
Programming Procedures.....	9
Host Interface Selection.....	13
Symbology Reading Control	14
User Defined Symbol ID	14
Symbology ID Transmission	16
Readable Barcode Setting	17
Code 39/Code 32 Setting.....	19
Code 39 Setting	20
Codabar/NW-7 Setting	21
UPC-A & UPC-E Setting	22
EAN Setting.....	25
UCC Coupon Extended Code Setting.....	28
IATA & Interleaved 2 of 5 Setting	29
Code 25 Family Setting.....	30
Code 11 & Code 93 Setting	31
MSI/Plessey Setting	32
Code 128 Setting	33
GS1-128 Setting.....	34

UK/Plessey Setting	35
Telepen Setting	36
GS1 DataBar Setting.....	37
Composite Codes, Codablock F, PDF417/MicroPDF417 Setting.....	38
Code 16K & Code 49 Setting.....	39
QR Code Setting	40
Data Matrix Setting.....	41
MaxiCode Setting.....	42
Aztec Code Setting	43
Australian Post, US Planet, US Postnet, British Post,& Japan Post Setting	44
Netherlands KIX Code, Intelligent Mail,& Korea Post Code Setting	45
Keyboard Interface Control.....	46
Keyboard Layout (Language) Setting	46
Record Suffix, Preamble, Postamble, FNC1 Symbol Character Transmission	47
Caps Lock & Caps Lock Release Control.....	48
Delay Setting.....	49
Function Key &Key Pad Emulation, Upper/Lower Case Setting, Dollar Sign Control.....	50
Code Page: Barcode Encoding Format	51
Code Page: Keyboard Output.....	53
Serial Interface Control	55
STX/ETX Control, Record Suffix, Preamble, Postamble, FNC1 Symbol Char. Transmission.....	55
Delay Setting.....	56
Protocol, ACK/NAK Setting	57

Response Time-out Setting, Baud Rate, Data Frame	58
Code Page: Barcode Encoding Format, Serial Port Output	59
Operation Control	61
Operation Mode	61
Illumination Control, Object Detection Control	62
Background Lighting, Image Sensing Sensitivity	63
Aiming Control, Pre-decode Aiming Timer, and Decode Aiming Control	64
Center Alignment, Unique Barcode Reporting	65
Smart Scene	66
Speaker Tone and Volume Adjust, Power On and Good Read Indicator Control	67
1D Code Inverse Reading	68
Reread Delay, Good Read Delay Control, and Good Read Duration	69
Light Source On Time and Hands-free Time-out	70
OK/NG Beep Control, NG, Object-in, and Object-out Message Output	71
Operation Control	72
Batch Reading	72
Condensed DataWizard	76
Preamble, Postamble, Data Length, Symbol ID Transmission	76
Data Formatter Setting	77
Data Verifier Setting	78
Data Replacer Setting	79
Data Organizer Setting	80
APPENDIX	84

Symbology ID Table	85
Keyboard Function Code Table	87
Code Page – Table of Corresponding Languages.....	89
Code Page – Unicode Hex Input Setup.....	90
ASCII Input Shortcut.....	94
Host Interface Quick Set Commands	95
Operation Mode Quick Set Commands.....	96
System Commands	98



CONFIGURING YOUR SCANNER

Barcode Programming Manual

The FuzzyScan barcode commands are specially designed **Proprietary** barcode labels which allow you to set the FuzzyScan internal programming parameters. There are **System Command**, **Family Code** and **Option Code** for programming purpose.

Each programmable family and barcode command label is listed on the same page with major system commands. The detailed explanations and special programming flowchart are printed on facing or following pages. You can read the explanation and set the FuzzyScan concurrently.

A supplemental barcode command menu incorporates the barcode command labels of System Command and Option Code. As you set the FuzzyScan, open the barcode command menu to find the option code page. You may scan the desired family code and option code to set FuzzyScan. If you want to change the programming family for multiple settings, you need only turn over the programming page to find next desired programming family.

System Command

The System Command is the highest level barcode command which directs FuzzyScan to perform immediate operations, such as entering programming mode (**PROGRAM**), exiting programming mode (**EXIT**), listing system information (**SYSLIST**), recovering to factory preset configurations (M_DEFAULT) and so on. Please note that all system commands will take a few seconds to complete the operations. User must wait for the completion beeps before scanning another barcode.

Family Code

The Family Code is scanned to select the user desired programming family. FuzzyScan has already provided more than one hundred programming families to meet any specific requirements.

Option Code

The Option Codes is a set of barcode commands represented by "0-9", "A-F" and finishing selection (**FIN**). For most setting, you must select at least one option code following the family code selection to set the desired parameter for the selected programming family.

Programming Procedures

As you scan the barcode command to select the desired parameters, information about the final selected parameters represented by the barcode commands are stored in the FuzzyScan's internal Flash Memory ASIC or memory. If you turn off the unit, the Flash Memory ASIC or non-volatile memory retains all programming options. You need not re-program the FuzzyScan if you want to keep the existing configurations in the next power on.


The programming procedures of FuzzyScan are designed as simple as possible for ease of setting. Most programming families take the **Single Scan Selection** programming procedure. But several programming families have more complex and flexible programmable options, and you must take **Multiple Scans Selection, Cycling Scan Selection or Dual Level Selection** to complete their programming procedures. Each kind of programming procedure is listed in the following pages for your reference. Please give careful attention to become familiar with each programming procedure.

If the programming family must take multiple scans selection, cycling scan selection, or dual level selection procedures, the family of the programming menu will be marked with the matched representing symbol of **Programming Category** (P.C.) in bold font listed in the following table. You can easily find the bold mark in the programming menu, and refer to their flowcharts for details. Before setting the FuzzyScan, please also refer to the "Beeping Indications" listed in Appendix to understand the details of programming beeping indications. It will be very helpful for you to know the existing status while you are programming the FuzzyScan.

Conventions of Programming Menu


Conventions	Descriptions
▲	Factory Default Value
P.C.	Programming Category SS : Single Scan selection MS : Multiple Scans selection CS : Cycling Scan selection DS : Dual level Scan selection
()	Necessary Option Code
[]	Selectable Option Code

Program & End

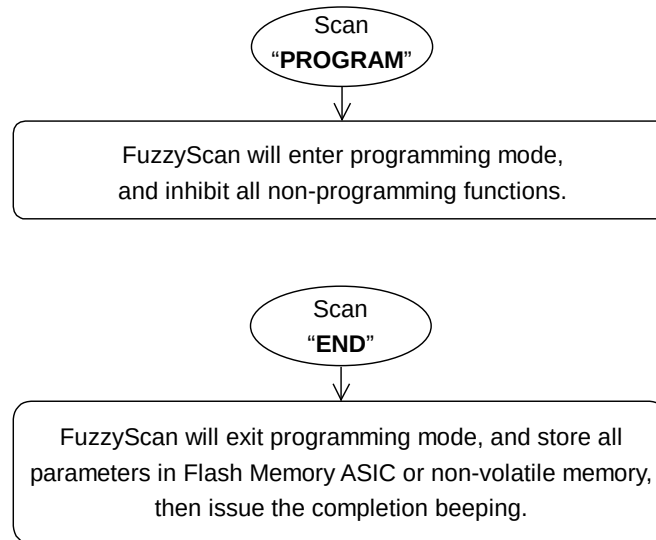


 Please note that the FuzzyScan will take 3-4 seconds to store parameters in internal Flash Memory ASIC or non-volatile memory after you scan the **"END"**. Please **don't** turn off the power before the completion beeping. It may destroy all configured parameters.

System List, Group & Master Default

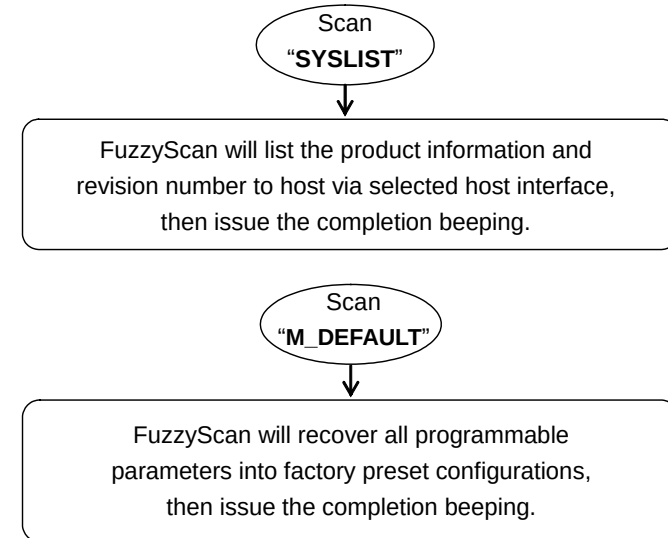

Single scan selection

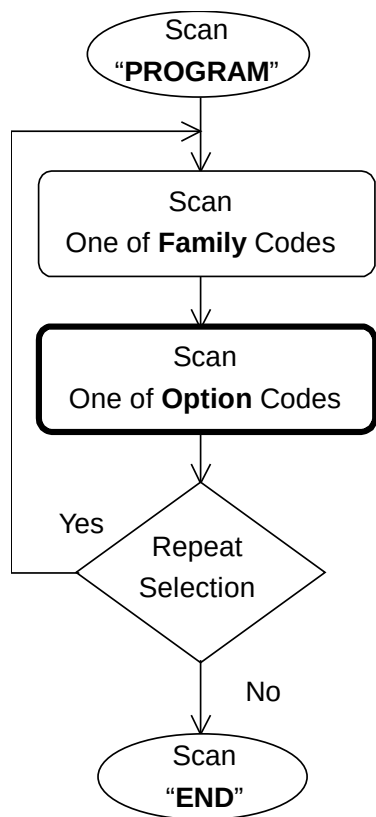

Enter programming mode.


Select one of desired programming families.

Select one option code of desired parameter.

Want to select another programming family?

Exit programming mode.

Multiple scans selection

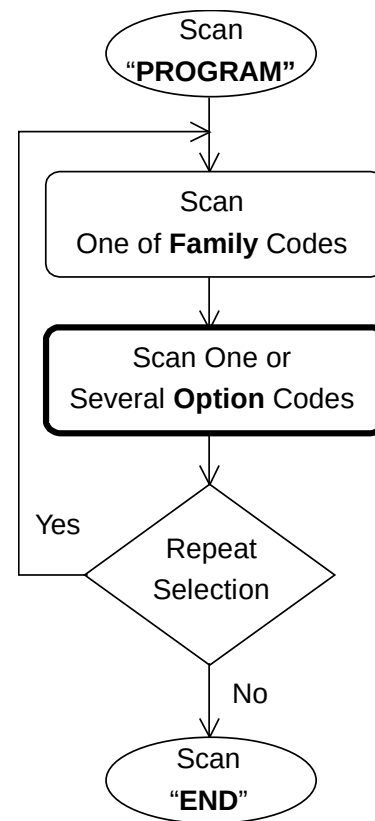

Enter programming mode.


Select one of desired programming families.

1. Select one or several option codes to select desired parameters.
2. If it's necessary, scan "FIN" to terminate option code selection.


Want to select another programming family?

Exit programming mode.

Cycling scan selection

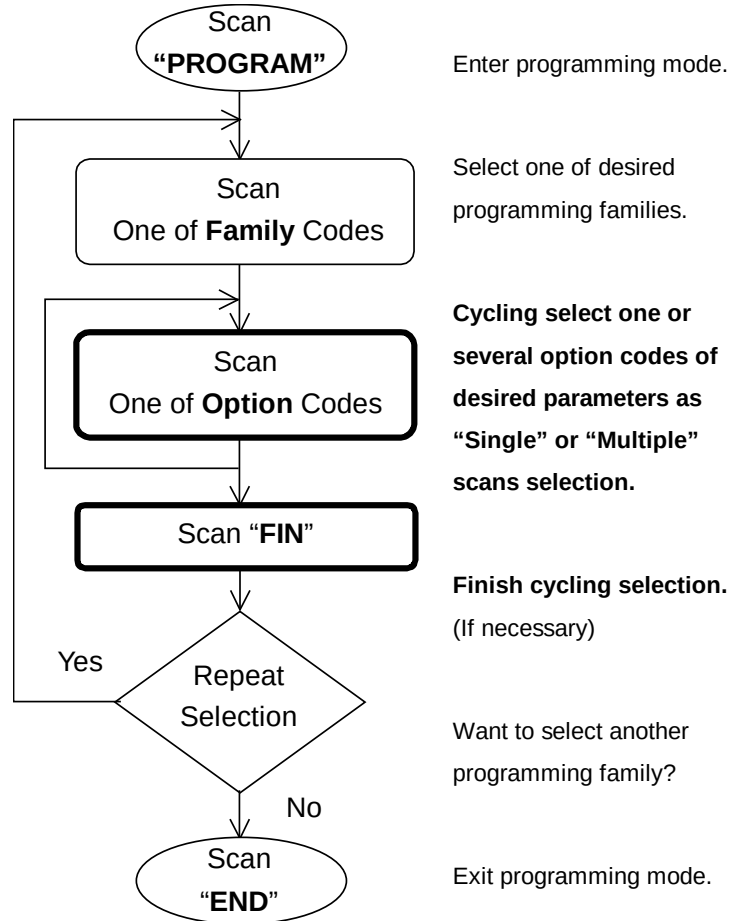

Dual level selection

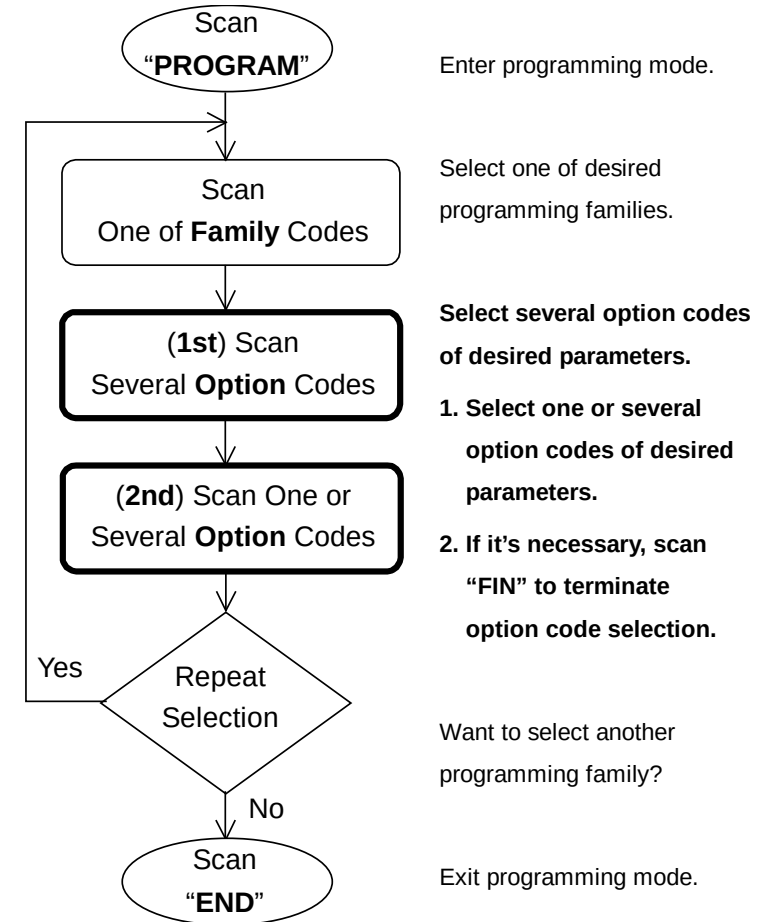



PROGRAM

Host Interface Selection



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Host Interface Selection	MS	IBM PS/2, 25-30 series keyboard wedge interface	02
	MS	Standard/TTL RS-232 peer-to-peer serial	06
	MS	USB Com Port Emulation	09
	MS	PS/2 (DOS/V) direct link (keyboard replacement)	10
	MS	PS/2 (DOS/V) keyboard wedge turbo mode	13
	MS	PS/2 (DOS/V) keyboard wedge standard mode	14
	MS	USB HID standard mode ▲	18
	MS	USB HID turbo mode	19
	MS	USB HID Legacy	20
	MS	USB EFT Terminal Mode	21



PROGRAM

Symbology Reading Control

User Defined Symbol ID



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code	2nd Option Code
Symbol ID : 1 character 	DS	Code 128 (default=B)	00	(1 character)
		GS1-128 (default=C)	01	(1 character)
		UPC-A (default=A)	02	(1 character)
		EAN-13 (default=F)	03	(1 character)
		Codabar/NW-7 (default=D)	04	(1 character)
		Code 39/Code 32 (default=G)	05	(1 character)
		Code 93 (default=H)	06	(1 character)
		Standard/Industrial 2 of 5 (default=I)	07	(1 character)
		Interleaved 2 of 5 (default=J)	08	(1 character)
		Matrix 2 of 5 (default=K)	09	(1 character)
		China Postal Code (default=L)	10	(1 character)
		German Postal Code (default=M)	11	(1 character)
		IATA (default=O)	12	(1 character)
		Code 11 (default=P)	13	(1 character)
		MSI/Plessey (default=R)	14	(1 character)
		UK/Plessey (default=S)	15	(1 character)
		Telepen (default=T)	16	(1 character)
		GS1 DataBar (default=X)	17	(1 character)
		UPC-E (default=E)	18	(1 character)
		EAN-8 (default=N)	19	(1 character)
		Trioptic Code 39 (default=W)	20	(1 character)
		UCC Coupon Extended Code (default=Z)	21	(1 character)
		PDF417/Micro PDF417 (default=V)	22	(1 character)
		Codablock F (default=Y)	23	(1 character)
		Code 16K (default=Q)	24	(1 character)
		Code 49 (default=U)	25	(1 character)
		Korea Post Code (default=a)	26	(1 character)
		QR & Micro QR Code (default=b)	28	(1 character)
		Data Matrix (default=c)	29	(1 character)
		Maxi Code (default=d)	30	(1 character)



PROGRAM

Symbology Reading Control
User Defined Symbol ID (continued)



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code	2nd Option Code
Symbol ID : 1 character 	DS	Aztec Code (default=e) Chinese Sensible (default=f) Australian Post (default=g) British Post (default=h) Intelligent Mail (USPS 4CB/One Code) (default=j) Japan Post (default=k) Netherlands KIX Post (default=l) US Planet (default=m) US Postnet (default=o)	31 32 33 34 36 37 38 39 41	(1 character) (1 character) (1 character) (1 character) (1 character) (1 character) (1 character) (1 character) (1 character)



PROGRAM

Symbology Reading Control Symbology ID Transmission



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Symbology ID Transmission 	SS	Disable symbology ID transmission ▲	0
	SS	Enable prefix CINO symbology ID transmission	1
	SS	Enable suffix CINO symbology ID transmission	2
	SS	Enable both prefix and suffix CINO symbology ID transmission	3
	SS	Enable prefix AIM symbology ID transmission	4
	SS	Enable suffix AIM symbology ID transmission	5
	SS	Enable both prefix and suffix AIM symbology ID transmission	6



PROGRAM

Symbology Reading Control Readable Barcode Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Readable Symbology Setting 	SS	Auto ▲	00
	CS	Popular 1D	C0
	CS	Code 128 *	01
	CS	GS1-128 *	31
	CS	UPC-A *	02
	CS	UPC-E *	03
	CS	EAN-13 *	04
	CS	EAN-8 *	05
	CS	Codabar/NW-7 *	06
	CS	Code 39 *	07
	CS	Trioptic Code 39	47
	CS	Standard/Industrial 2 of 5	08
	CS	Matrix 2 of 5	38
	CS	Interleaved 2 of 5 *	48
	CS	China Postal Code	58
	CS	Germany Postal Code	68
	CS	Code 93 *	09
	CS	Code 11	10
	CS	MSI/Plessey	11
	CS	UK/Plessey	12
	CS	Telepen	13
	CS	GS1 DataBar (RSS-14) *	14
	CS	IATA	15
	CS	PDF417 * /Micro PDF417	17
	CS	Codablock F	18
	CS	Code 16K	19
	CS	Code 49	20
	CS	Korea Post Code	21
	CS	QR Code */ Micro QR Code *	A0
	CS	Data Matrix *	A1
	CS	MaxiCode	A2
	CS	Aztec Code *	A3
	CS	Chinese Sensible (Han Xin) Code	A4

Remember to scan “**FIN**” to terminate this selection. But if you select the “**Auto**”, FuzzyScan will terminate this selection **automatically**.



PROGRAM

Symbology Reading Control

Readable Barcode Setting (continued)



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Readable Symbology Setting 	CS	Australian Post	B0
	CS	British Post	B1
	CS	Intelligent Mail barcode	B3
	CS	Japanese Post	B4
	CS	KIX Post	B5
	CS	Planet Code	B6
	CS	Postnet	B8

- If your application is known, you may select those known symbologies only to increase the reading speed and decrease the possibility of reading error. Furthermore, to add the "Symbology ID" into the transmitted data is also helpful to identify the specific symbology.
- Above symbologies marketed with * are enabled as default. When you select "Auto", the scanner only reads those symbologies marked with *.
- "Popular 1D" includes "Code 128", "GSA-128", "UPC-A", "UPC-E", "EAN-13", "EAN-8", "Codabar/NW-7", "Code 39", "Interleaved 2 of 5", "Code 93", "GS1 DataBar (RSS-14)".
- When you set the minimum and maximum length of each symbology, please note the data length of scanned barcode doesn't include start/stop characters.



PROGRAM

Symbology Reading Control

Code 39/Code 32 Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Code 39 Family Setting 	SS	Disable Code 39	0
	SS	Enable Code 39 ▲	1
	SS	Select Standard Code 39 as primary format ▲	2
	SS	Select Full ASCII Code 39 as primary format	3
	SS	Select Code 32 (PARAF, Italian Pharmaceutical) as primary format	4
	SS	Disable start/stop symbol transmission ▲	5
	SS	Enable start/stop symbol transmission	6
	SS	Disable Code 32 leading A transmission ▲	7
	SS	Enable Code 32 leading A transmission	8
	SS	Disable MOD 43 check digit verification ▲	9
	SS	Enable MOD 43 check digit verification	A
	SS	Disable check digit transmission ▲	B
	SS	Enable check digit transmission	C
	SS	Disable Code 39 buffering ▲	D
	SS	Enable Code 39 buffering	E
Trioptic Code 39 Setting 	SS	Disable Trioptic Code 39 ▲	0
	SS	Enable Trioptic Code 39	1
Code 39 Min. Length 	SS	Default (01) ▲	FIN (2 digits)
	MS	01-Maximum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	
Code 39 Max. Length 	SS	Default (98) ▲	FIN (2 digits)
	MS	98-Minimum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	

■ Trioptic Code 39 and Code 39 Full ASCII cannot be enabled simultaneously.



PROGRAM

Symbology Reading Control

Code 39 Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Code 39 Security Level	SS	Level 0	0
	SS	Level 1	1
	SS	Level 2 ▲	2
	SS	Level 3	3

■ Code 39 Security Level

The scanner offers four levels of decode security for Code39 barcodes:

Level 0: If you are experiencing misread of poorly-printed or serious out-of-spec. barcodes in level 1, please select level 0.

Level 1: If you are experiencing misread of poorly-printed or out-of-spec. barcodes in level 2, please select level 1.

Level 2: This is the default setting which allows the scanner to operate fastest, while providing sufficient security in decoding "in-spec" Code39 barcodes.

Level 3: If you failed to read poorly-printed or out-of-spec. barcodes in level 2, please select level 3. This is the most aggressive setting and may increase the misread.



PROGRAM

Symbology Reading Control

Codabar/NW-7 Setting



F DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Codabar Setting 	SS	Disable Codabar	0
	SS	Enable Codabar ▲	1
	SS	Select Codabar standard format ▲	2
	SS	Select Codabar ABC format	3
	SS	Select Codabar CLSI format	4
	SS	Select Codabar CX format	5
	SS	Disable start/stop symbol transmission ▲	6
	SS	Enable ABCD/ABCD start/stop symbol transmission	7
	SS	Enable abcd/abcd start/stop symbol transmission	8
	SS	Enable ABCD/TN*E start/stop symbol transmission	9
	SS	Enable abcd/tn*e start/stop symbol transmission	A
	SS	Disable check digit verification ▲	B
	SS	Enable check digit verification	C
	SS	Disable check digit transmission ▲	D
	SS	Enable check digit transmission	E
Codabar Check Digit Settings 	SS	Modulus 16 ▲	0
	SS	Modulus 10/weight 3	1
	SS	Modulus 11	2
	SS	Modulus 10/weight 2	3
	SS	7 check DR	4
	SS	Weight Modulus 11	5
	SS	Runes (Modulus 10/weight 2)	6
Codabar Min. Length 	SS	Default (04) ▲	FIN (2 digits)
	MS	01-Maximum	
		Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	
Codabar Max. Length 	SS	Default (98) ▲	FIN (2 digits)
	MS	98-Minimum	
		Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	



PROGRAM

Symbology Reading Control

UPC-A & UPC-E Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
UPC Family Setting 	SS	Disable UPC-A	0
	SS	Enable UPC-A ▲	1
	SS	Disable UPC-E	2
	SS	Enable UPC-E ▲	3
	SS	Disable UPC-E expansion ▲	4
	SS	Enable UPC-E expansion	5
	SS	Disable UPC standardization ▲	6
	SS	Enable UPC standardization	7
	SS	Disable UPC numeric system	8
	SS	Enable UPC numeric system ▲	9
	SS	Disable UPC-A check digit transmission	A
	SS	Enable UPC-A check digit transmission ▲	B
	SS	Disable UPC-E check digit transmission	C
	SS	Enable UPC-E check digit transmission ▲	D
	SS	Disable UPC "leading 1" portion ▲	E
	SS	Enable UPC "leading 1" portion	F

- When enable UPC-E expansion, the UPC-E decoded data will be converted to UPC-A format and affected by related setting, such as UPC standardization, UPC numeric system, UPC-A check digit transmission.
- UPC-E & EAN-8 Expansion : Expand the 8-digit UPC-E and 8-digit EAN-8 to 12-digit UPC-A and 13-digit EAN-13.
- UPC-A Standardization : Expand the 12-digit UPC-A to 13-digit EAN-13 with 1 zero insertion.
- UPC Lead 1 Numeric System :To read UPC leading with the 1 numeric system, you must enable this option.

WPC Selection (UPC/EAN/CAN)	Basic Length	Disable Check Digit	Disable Numeric System	With 2-digit Addendum	With 5-digit Addendum	Enable Standardization	Enable Expansion
UPC-A	12	- 1	- 1	+ 2	+ 5	+ 1	0
UPC-E	8	- 1	- 1	+ 2	+ 5	+ 1	+ 4
EAN-13	13	- 1	NC	+ 2	+ 5	NC	0
EAN-8	8	- 1	NC	+ 2	+ 5	NC	+ 5



PROGRAM

Symbology Reading Control

UPC-A & UPC-E Setting (continued)



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
UPC Supplement Setting 	SS	Select UPC without supplement digits ▲	0
	SS	Select UPC with only 2 supplement digits	1
	SS	Select UPC with only 5 supplement digits	2
	SS	Select UPC with 2/5 supplement digits	3
	SS	Disable force supplement digits output ▲	4
	SS	Enable force supplement digits output	5
	SS	UPC Family Addenda Separator Off ▲	6
	SS	UPC Family Addenda Separator On	7
UPC/EAN Security Level 	SS	Level 0	0
	SS	Level 1 ▲	1
	SS	Level 2	2
		Only available for UPC-A & EAN-13	
Supplement Scan Voting 	SS	None	0
	SS	Level 1	1
	SS	Level 2	2
	SS	Level 3 ▲	3
	SS	Level 4	4
	SS	Level 5	5
	SS	Level 6	6
	SS	Level 7	7
	SS	Level 8	8
	SS	Level 9	9
	SS	Level 10	A
	SS	Level 11	B
	SS	Level 12	C
	SS	Level 13	D

- **UPC/EAN Security Level**

The scanner offers three levels of decode security for UPC/EAN barcodes:

Level 0: If you are experiencing misread of poorly-printed or out-of-spec. barcodes, especially in characters 1, 2, 7, and 8 in level 1, please select level 0. Selection of this security level may significantly impair the decoding ability of the scanner.

Level 1: This is the default setting which allows the scanner to operate fastest, while providing sufficient security in decoding "in-spec" UPC/EAN barcodes.

Level 2: If you failed to read poorly-printed or out-of-spec. barcodes in level 1, please select level 2. This is the most aggressive setting and may increase the misread.

- The **Supplement Scan Voting** is the number of times the same UPC/EAN with 2/5 supplement digits has to be decoded before it is transmitted. It is helpful when decoding a mix of UPC/EAN symbols with and without supplement digits. This function is effective when you select UPC/EAN with only 2 supplement digits, UPC/EAN with only 5 supplement digits or UPC/EAN with 2/5 supplement digits. The default value is Level 3. When you select higher level, it may impact the reading speed on poorly-printed, low contrast or damage barcode labels.



PROGRAM

Symbology Reading Control

EAN Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
EAN Setting 	SS	Disable EAN-13	0
	SS	Enable EAN-13 ▲	1
	SS	Disable EAN-8	2
	SS	Enable EAN-8 ▲	3
	SS	Disable EAN-8 expansion ▲	4
	SS	Enable EAN-8 expansion	5
	SS	Disable EAN-13 check digit transmission	6
	SS	Enable EAN-13 check digit transmission ▲	7
	SS	Disable EAN-8 check digit transmission	8
	SS	Enable EAN-8 check digit transmission ▲	9
	SS	Disable ISBN/ISSN Conversion reading check ▲	A
	SS	Enable ISBN/ISSN Conversion reading check	B
EAN Supplement Setting 	SS	Select EAN without supplement digits ▲	0
	SS	Select EAN with only 2 supplement digits	1
	SS	Select EAN with only 5 supplement digits	2
	SS	Select EAN with 2/5 supplement digits	3
	SS	Disable force supplement digits output ▲	4
	SS	Enable force supplement digits output	5
	SS	EAN Addenda Separator Off ▲	6
	SS	EAN Addenda Separator On	7
Supplement Scan Voting 	SS	None	0
	SS	Level 1	1
	SS	Level 2	2
	SS	Level 3 ▲	3
	SS	Level 4	4
	SS	Level 5	5
	SS	Level 6	6
	SS	Level 7	7
	SS	Level 8	8
	SS	Level 9	9
	SS	Level 10	A
	SS	Level 11	B
	SS	Level 12	C
	SS	Level 13	D

- The Supplement Scan Voting is the number of times the same UPC/EAN with 2/5 supplement digits has to be decoded before it is transmitted. It is helpful when decoding a mix of UPC/EAN symbols with and without supplement digits. This function is effective when you select UPC/EAN with only 2 supplement digits, UPC/EAN with only 5 supplement digits or UPC/EAN with 2/5 supplement digits. The default value is Level 3. When you select higher level, it may impact the reading speed on poorly-printed, low contrast or damage barcode labels.



PROGRAM

Symbology Reading Control EAN Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
UPC/EAN Security Level 	SS SS SS	Level 0 Level 1 ▲ Level 2 Only available for UPC-A & EAN-13	0 1 2
EAN Supplement Control 	SS SS SS SS SS SS SS SS	Disable all specific prefix supplement digital output ▲ Enable all specific prefix supplement digital output Enable 491 Supplement Digit Output Enable 978/979 Supplement Digit Output Enable 977 Supplement Digit Output Enable 378/379 Supplement Digit Output Enable 414/419 Supplement Digit Output Enable 434/439 Supplement Digit Output	0 1 2 3 4 5 6 7

■ UPC/EAN Security Level

The scanner offers three levels of decode security for UPC/EAN barcodes:

Level 0: If you are experiencing misread of poorly-printed or out-of-spec. barcodes, especially in characters 1, 2, 7, and 8 in level 1, please select level 0. Selection of this security level may significantly impair the decoding ability of the scanner.

Level 1: This is the default setting which allows the scanner to operate fastest, while providing sufficient security in decoding “in-spec” UPC/EAN barcodes.

Level 2: If you failed to read poorly-printed or out-of-spec. barcodes in level 1, please select level 2. This is the most aggressive setting and may increase the misread.

■ EAN Supplement Control

If you select EAN with only 2, or 5 or 2/5 supplement digits and enable 491 prefix supplement digit output, the scanner will transmit EAN with 2, or 5 or 2/5 supplement digits barcodes starting with 491 prefix. The EAN without supplement digit will not be transmitted.

If you select EAN with only 2, or 5 or 2/5 supplement digits and enable the other except 491 prefix supplement digit output, the scanner will transmit EAN with 2, or 5, or 2/5 supplement digits barcodes starting with specific prefix. The EAN without supplement digit will be transmitted.



PROGRAM

Symbology Reading Control
UCC Coupon Extended Code Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
UCC Coupon Extended Code 	SS SS	Disable UCC Coupon Extended Code ▲ Enable UCC Coupon Extended Code	0 1

- UCC Coupon Extended Code
When UCC coupon extended code function is enabled, scanner decodes UPC-A barcodes starting with digit “5”, EAN-13 barcodes starting with digit “99” and GS1-128 Coupon Codes. UPC-A, EAN-13 and EAN-128 must be enabled to scan all types of Coupon Codes.



PROGRAM

Symbology Reading Control

IATA & Interleaved 2 of 5 Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
IATA Setting 	SS	Disable IATA ▲	0
	SS	Enable IATA	1
	SS	Select 15-digit fixed length IATA checking ▲	2
	SS	Select variable length IATA	3
	SS	Disable check digit verification ▲	4
	SS	Enable check digit automatic verification	5
	SS	Enable S/N checking digit verification only	6
	SS	Enable CPN checking digit verification only	7
	SS	Enable CPN, Airline and S/N check digit verification	8
	SS	Disable check digit transmission ▲	9
	SS	Enable check digit transmission	A
	SS	Disable start/stop symbol transmission ▲	B
	SS	Enable start/stop symbol transmission	C
Interleaved 2 of 5 Setting 	SS	Disable Interleaved 2 of 5	0
	SS	Enable Interleaved 2 of 5 ▲	1
	SS	Select Interleaved 2 of 5 as primary format ▲	2
	SS	Select German Postal Code as primary format	3
	SS	No check character ▲	4
	SS	Validate USS check digit	5
	SS	Validate OPCC check digit	6
	SS	Disable check digit transmission ▲	7
	SS	Enable check digit transmission	8



PROGRAM

Symbology Reading Control

Code 25 Family Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Code 25 Setting 	SS	Disable Standard/Industrial 2 of 5 ▲	0
	SS	Enable Standard/Industrial 2 of 5	1
	SS	Disable Matrix 2 of 5 ▲	2
	SS	Enable Matrix 2 of 5	3
	SS	Disable China Postal Code ▲	4
	SS	Enable China Postal Code	5
	SS	Disable check digit verification ▲	6
	SS	Enable check digit verification	7
	SS	Disable check digit transmission ▲	8
	SS	Enable check digit transmission	9
Code 25 Family Min. Length 	SS	Default (04) ▲	FIN (2 digits)
	MS	01-Maximum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	
Code 25 Family Max. Length 	SS	Default (98) ▲	FIN (2 digits)
	MS	98-Minimum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	

- For Code25 setting, we recommend you to select only one type of Code 25 or set the maximum/minimum barcode length. To decode all types of Code 25 or to variable length of Code 25 will increase the possibility of reading error.



PROGRAM

Symbology Reading Control

Code 11 & Code 93 Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Code 11 Setting 	SS SS SS SS SS SS SS	Disable Code 11 ▲ Enable Code 11 Disable check digit verification ▲ Select 1-check digit verification Select 2-check digit verification Disable check digit transmission ▲ Enable check digit transmission	0 1 2 3 4 5 6
Code 11 Min. Length 	SS MS	Default (04) ▲ 01-Maximum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Code 11 Max. Length 	SS MS	Default (98) ▲ 98-Minimum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Code 93 Setting 	SS SS SS SS	Disable Code 93 Enable Code 93 ▲ Disable check digit transmission ▲ Enable check digit transmission	0 1 2 3
Code 93 Min. Length 	SS MS	Default (01) ▲ 01-Maximum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Code 93 Max. Length 	SS MS	Default (98) ▲ 98-Minimum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)



PROGRAM

Symbology Reading Control MSI/Plessey Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
MSI/Plessey Setting 	SS	Disable MSI/Plessey ▲	0
	SS	Enable MSI/Plessey	1
	SS	Select MOD 10 check digit ▲	2
	SS	Select MOD 10-10 check digit	3
	SS	Select MOD 11-10 check digit	4
	SS	Disable check digit transmission ▲	5
	SS	Enable check digit transmission	6
MSI/Plessey Min. Length 	SS	Default (04) ▲	FIN (2 digits)
	MS	01-Maximum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	
MSI/Plessey Max. Length 	SS	Default (98) ▲	FIN (2 digits)
	MS	98-Minimum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	



PROGRAM

Symbology Reading Control

Code 128 Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Code 128 Setting 	SS	Disable Code 128	0
	SS	Enable Code 128 ▲	1
	SS	ISBT Concatenation Off ▲	2
	SS	ISBT Concatenation On	3
	SS	ISBT Concatenation On – Check ISBT table	4
	SS	ISBT Concatenation Auto	5
Code 128 Min. Length 	SS	Default (01) ▲	FIN
	MS	01-Maximum	(2 digits)
		Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	
Code 128 Max. Length 	SS	Default (98) ▲	FIN
	MS	98-Minimum	(2 digits)
		Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	
Code 128 Security Level 	SS	Level 0	0
	SS	Level 1 ▲	1

■ Code 128 Setting

ISBT Concatenation Off: The scanner will not output ISBT concatenated barcodes.

ISBT Concatenation On: The scanner will only decode and output ISBT concatenated barcodes. The scanner will not decode or output single ISBT barcodes.

ISBT Concatenation On – Check ISBT table: The scanner will only output ISBT concatenated barcodes that conform to ICCBBA standards. The scanner will not output single ISBT barcodes or ISBT concatenated barcodes that do not conform to ICCBBA standards.

ISBT Concatenation Auto: The Scanner will decode and output both ISBT concatenated barcodes and single ISBT barcodes.

■ Code 128 Security Level

The scanner offers two levels of decode security for Code128 barcodes:

Level 0: If you are experiencing misread of poor-printed or out-of-spec. barcode in level1, please select level 0.

Level 1: This is the default setting which allows the scanner to operate fastest, while providing sufficient security in decoding "in-spec." Code128 barcodes.



PROGRAM

Symbology Reading Control

GS1-128 Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
GS1-128 Setting 	SS SS	Disable GS1-128 Enable GS1-128 ▲	0 1
GS1-128 Min. Length 	SS MS	Default (01) ▲ 01-Maximum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
GS1-128 Max. Length 	SS MS	Default (98) ▲ 98-Minimum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)



PROGRAM

Symbology Reading Control

UK/Plessey Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
UK/Plessey Setting 	SS	Disable UK/Plessey ▲	0
	SS	Enable UK/Plessey	1
	SS	Select UK/Plessey Standard Format ▲	2
	SS	Select UK/Plessey CLSI Format	3
	SS	Disable Convert X to A-F ▲	4
	SS	Enable Convert X to A-F	5
	SS	Disable check digit transmission ▲	6
	SS	Enable check digit transmission	7
UK/Plessey Min. Length 	SS	Default (04) ▲	FIN (2 digits)
	MS	01-Maximum Scan 2 digits from the option code chart in Appendix, and then FuzzyScan will terminate this selection automatically.	
UK/Plessey Max. Length 	SS	Default (98) ▲	FIN (2 digits)
	MS	98-Minimum Scan 2 digits from the option code chart in Appendix, then FuzzyScan will terminate this selection automatically.	



PROGRAM

Symbology Reading Control

Telepen Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Telepen Setting 	SS SS SS SS SS SS	Disable Telepen ▲ Enable Telepen Select Telepen Numeric mode ▲ Select Telepen Full ASCII mode Disable check digit transmission ▲ Enable check digit transmission	0 1 2 3 4 5
Telepen Min. Length 	SS MS	Default (04) ▲ 01-Maximum Scan 2 digits from the option code chart in Appendix, then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Telepen Max. Length 	SS MS	Default (98) ▲ 98-Minimum Scan 2 digits from the option code chart in Appendix, then FuzzyScan will terminate this selection automatically.	FIN (2 digits)



PROGRAM

Symbology Reading Control

GS1 DataBar Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
GS1 DataBar Setting 	SS	Disable GS1 DataBar (RSS-14)	0
	SS	Enable GS1 DataBar (RSS-14) ▲	1
	SS	Disable GS1 DataBar Limited	2
	SS	Enable GS1 DataBar Limited ▲	3
	SS	DisableGS1 DataBar Expanded	4
	SS	EnableGS1 DataBar Expanded ▲	5
GS1 DataBar Limited Security Level 	SS	Level 1	0
	SS	Level 2	1
	SS	Level 3 ▲	2
		Only available for GS1 DataBar Limited Only available for F460, F560 scanners.	
GS1 DataBar Min. Length 	SS	Default (04) ▲	FIN (2 digits)
	MS	01-Maximum Only available for GS1 DataBar Expanded Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	
GS1 DataBar Max. Length 	SS	Default (74) ▲	FIN (2 digits)
	MS	74-Minimum Only available for GS1 DataBar Expanded. Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	

■ GS1 128 Limited Security Level

The scanner F460/F560 offers three levels of decode security for GS1 DataBar Limited barcodes:

Level 1: If you failed to read poorly-printed or out-of-spec. barcodes in level 2, please select level1. This is the most aggressive setting and may increase the misread.

Level 2: If you are experiencing misread of poor-printed or out-of-spec. barcode in level 3, please select level 2.

Level 3: This is the default setting which allows the scanner to operate fastest, while providing sufficient security in decoding "in-spec." GS1 128 Limited barcodes.



PROGRAM

Symbology Reading Control

Composite Codes, Codablock F, PDF417/MicroPDF417 Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Composite Codes Setting 	SS SS SS SS	Disable composite codes ▲ Enable composite codes UPC Composite Mode: UPC never linked ▲ UPC Composite Mode: UPC always linked If UPC Composite Mode: UPC never linked is selected, UPC barcodes are transmitted whether MicroPDF417 symbol is detected or not. If UPC Composite Mode: UPC always linked is selected, UPC barcodes are only transmitted when the MicroPDF417 is detected.	0 1 2 3
Codablock F Setting 	SS SS	Disable ▲ Enable	0 1
PDF417/MicroPDF417 Setting 	SS SS SS SS	Disable PDF417 Enable PDF417 ▲ Disable MicroPDF417 ▲ Enable MicroPDF417	0 1 2 3



PROGRAM

Symbology Reading Control

Code 16K & Code 49 Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Code 16K Setting 	SS SS	Disable Code 16K ▲ Enable Code 16K	0 1
Code 16K Min. Length 	SS MS	Default (01) ▲ 01-Maximum Scan 3 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (3 digits)
Code 16K Max. Length 	SS MS	Default (160) ▲ 160-Minimum Scan 3 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (3 digits)
Code 49 Setting 	SS SS	Disable Code 49 ▲ Enable Code 49	0 1
Code 49 Min. Length 	SS MS	Default (01) ▲ 01-Maximum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Code 49 Max. Length 	SS MS	Default (81) ▲ 81-Minimum Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)



PROGRAM

Symbology Reading Control

QR Code Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
QR Code Setting 	SS SS	Disable QR Code Enable QR Code ▲ Disable MicroQR Code Enable MicroQR Code ▲ Disable QR Code Append Enable QR Code Append ▲ Disable QR Code Inverse Reading Enable QR Code Inverse Reading Auto detect QR Code Inverse Reading ▲ Disable QR Code Mirror Images Enable QR Code Mirror Images Auto detect QR Code Mirror Images ▲	0 1 2 3 4 5 6 7 8 9 A B
QR Code Min. Length 	SS MS	Default (01) ▲ 01-Maximum Scan 4 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (4 digits)
QR Code Max. Length 	SS MS	Default (7089) ▲ 7089-Minimum Scan 4 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (4 digits)

- QR Code Inverse Reading: When Enabled, the scanner only read inversed (white on black) QR codes. If Auto detect is selected the scanner can read both normal and inversed QR codes. However, Auto detect might increase decoding time under certain circumstances.
- QR Code Mirror Images: When Enabled, the scanner only read mirrored QR and Micro QR codes. If Auto detect is selected the scanner can read both normal and mirrored QR/Micro QR codes. However, Auto detect might increase decoding time under certain circumstances.



PROGRAM

Symbology Reading Control Data Matrix Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Data Matrix Setting 	SS SS SS SS SS SS SS SS SS	Disable Data Matrix Enable Data Matrix ▲ Disable Data Matrix Inverse Reading Enable Data Matrix Inverse Reading Auto detect Data Matrix Inverse Reading ▲ Disable Data Matrix Mirror Images Enable Data Matrix Mirror Images Auto detect Data Matrix Mirror Images ▲	0 1 4 5 6 7 8 9
Data Matrix Min. Length 	SS MS	Default (01) ▲ 01-Maximum Scan 4 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (4 digits)
Data Matrix Max. Length 	SS MS	Default (3116) ▲ 3116-Minimum Scan 4 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (4 digits)
Damaged DM Code Reading 	SS SS SS	Standard ▲ Level 1 Level 2	0 1 2

- **Data Matrix Inverse Reading:** When Enabled, the scanner only read inversed (white on black) Data Matrix. If Auto detect is selected the scanner can read both normal and inversed Data Matrix. However, Auto detect might increase decoding time under certain circumstances.
- **Data Matrix Mirror Images:** When Enabled, the scanner only read mirrored Data Matrix. If Auto detect is selected the scanner can read both normal and mirrored Data Matrix. However, Auto detect might increase decoding time under certain circumstances.
- **Damaged DM Code Reading:** When using the scanner to read small or damaged DataMatrix, you can enable this function to improve the scanner's reading ability. Be aware that the scanner's snappiness deteriorates when this function is enabled.



PROGRAM

Symbology Reading Control MaxiCode Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
MaxiCode Setting 	SS SS	Disable MaxiCode ▲ Enable MaxiCode	0 1
MaxiCode Min. Length 	SS MS	Default (01) ▲ 01-Maximum Scan 3 digits from the option code chart in Appendix, then FuzzyScan will terminate this selection automatically.	FIN (3 digits)
MaxiCode Max. Length 	SS MS	Default (150) ▲ 150-Minimum Scan 3 digits from the option code chart in Appendix, then FuzzyScan will terminate this selection automatically.	FIN (3 digits)



PROGRAM

Symbology Reading Control

Aztec Code Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Aztec Code Setting 	SS SS	Disable Aztec Code Enable Aztec Code ▲	0 1
Aztec Code Min. Length 	SS MS	Default (01) ▲ 01-Maximum Scan 4 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (4 digits)
Aztec Code Max. Length 	SS MS	Default (3832) ▲ 3832-Minimum Scan 4 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (4 digits)



PROGRAM

Symbology Reading Control

Australian Post, US Planet, US Postnet, British Post,& Japan Post Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Australian Post Setting 	SS	Disable Australian Post ▲	0
	SS	Enable Australian Post	1
	SS	Raw format Output ▲	2
	SS	Numeric Encoding Output (N Encoding Table)	3
	SS	Alphanumeric Encoding Output (C Encoding Table)	4
	SS	Auto-discriminate Output (Combination C & N Encoding Table)	5
US Planet Setting 	SS	Disable US Planet ▲	0
	SS	Enable US Planet	1
	SS	Disable Check Digit Transmission ▲	2
	SS	Enable Check Digit Transmission	3
US Postnet Setting 	SS	Disable US Postnet ▲	0
	SS	Enable US Postnet	1
	SS	Disable Check Digit Transmission ▲	2
	SS	Enable Check Digit Transmission	3
British Post Setting 	SS	Disable British Post ▲	0
	SS	Enable British Post	1
	SS	Disable Check Digit Transmission ▲	2
	SS	Enable Check Digit Transmission	3
Japan Post Setting 	SS	Disable Japan Post ▲	0
	SS	Enable Japan Post	1

- Australian Post Setting: Auto-discriminate output option increase the risk of misread because the encoded data format does not specify the Encoding Table used for encoding.



PROGRAM

Symbology Reading Control

Netherlands KIX Code, Intelligent Mail,& Korea Post Code Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Netherlands KIX Code Setting 	SS SS	Disable Netherlands KIX Code ▲ Enable Netherlands KIX Code	0 1
Intelligent Mail Setting (USPS 4CB/One Code) 	SS SS	Disable Intelligent Mail ▲ Enable Intelligent Mail	0 1
Korea Post Code Setting 	SS SS	Disable ▲ Enable Length fixed in 6 characters.	0 1



PROGRAM

Keyboard Interface Control

Keyboard Layout (Language) Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Keyboard Layout 	SS	USA (QWERTY) ▲	00
	SS	France (AZERTY)	01
	SS	Germany (QWERTZ)	02
	SS	United Kingdom - UK (QWERTY)	03
	SS	Canadian French (QWERTY)	04
	SS	Spain (Spanish, QWERTY)	05
	SS	Sweden/Finland (QWERTY)	06
	SS	Portugal (QWERTY)	07
	SS	Norway (QWERTY)	08
	SS	Spain(Latin America, QWERTY)	09
	SS	Italy (QWERTY)	10
	SS	Netherlands (QWERTY)	11
	SS	Denmark (QWERTY)	12
	SS	Belgium (AZERTY)	13
	SS	Switzerland-Germany (QWERTZ)	14
	SS	Iceland (QWERTY)	15
	SS	Japan (DOS/V)	16
	SS	Czech (QWERTY)	17
	SS	Universal	99

Please refer to the ASCII/HEX Table listed in the Appendix to determine HEX codes for characters, symbols, and functions to be used as preamble or postamble. To set preamble or postamble as function key output, you must enable the "Function Key Emulation" feature as listed in page 47 first

- When Universal Keyboard is selected, ASCII and Extended ASCII characters are sent as sequence of alt key plus numeric keypad value. This is only valid for Windows OS.
- Keyboard Interface Message String :

Preamble	Data Length	Prefix Symbol ID	Scanned Data	Suffix Symbol ID	Postamble	Record Suffix
1-15 characters	2-4 digits	1 or 3 characters	Variable length	1 or 3 characters	1-15 characters	1 character



PROGRAM

Keyboard Interface Control

Record Suffix, Preamble, Postamble, FNC1 Symbol Character Transmission



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Record Suffix 	SS None SS RETURN ▲ SS TAB SS SPACE SS ENTER (Numeric Key Pad) SS User defined character (1 character)		0 1 2 3 4 5, (00-7F)
Preamble 	SS None ▲ MS 1-15 characters Maximum 15-character input; scan "FIN" to terminate this selection.		FIN [00-7F], [FIN]
Postamble 	SS None ▲ MS 1-15 characters Maximum 15-character input; scan "FIN" to terminate this selection.		FIN [00-7F], [FIN]
FNC1 Symbol Char. Transmit 	SS Disable SS Enable ▲		0 1

- FNC1 Symbol Char. Transmit: When this function is enabled and the FNC1 is contained in scanned data, the scanner transmits the FNC1 to the host. Chart of the FNC1 is provided in Appendix- Keyboard Function Code Table. When the scanner interface is set to keyboard, the scan code is converted to corresponding key function before it is transmitted.
- The function of "Caps Lock Control" and "Key Pad Emulation" are only available for IBM PC/AT, PS/VP, PS/2 series personal computers and compatible machines. While selecting the other host interfaces, these selections don't perform the above functions for you.



PROGRAM

Keyboard Interface Control

Caps Lock & Caps Lock Release Control



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Caps Lock Control 	SS SS SS	"Caps Lock Off" State ▲ "Caps Lock On" State Auto Detect (PC/AT, PS/2, Keyboard Replacement and DOS/V Machines only)	0 1 2
Caps Lock Release Control 	SS SS	"Caps Lock On, Caps Off" ▲ "Caps Lock On, Shift Off"	0 1

- The function of "Caps Lock Control" is only available for IBM PC/AT, PS/VP, PS/2 series personal computers and compatible machines. While selecting the other host interfaces, these selections don't perform the above functions for you.
- Please check the actual Caps Lock state in use while software application is running. If the Caps Lock state is off, select "Caps Lock Off" state, and then FuzzyScan will perform normal data transmission. If the Caps Lock state is on, select "Caps Lock On" state. Select "Auto Detect", FuzzyScan will perform special transmission handshaking without changing the status of Caps Lock switch.



PROGRAM

Keyboard Interface Control Delay Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Intermessage Delay 	SS MS	None ▲ 1-99 (x5) msec. Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Intercharacter Delay 	SS MS	None ▲ 1-99 (x5) msec. Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Interfunction Delay 	SS MS	None ▲ 1-99 (x5) msec. Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)

- Intermessage Delay is a time delay between messages output by FuzzyScan. Increasing this delay will help host applications process the incoming data on time.
- Intercharacter Delay is a time delay between data characters output by FuzzyScan. These two parameters are used to synchronize data communication when : 1) the data transmission speed is too fast, characters may be skipped; 2) multitasking operation system or host computers in a network may slow down the keyboard handling; 3) various notebook or desktop PC systems require different timing parameter settings. Please always add one extra unit as safety margin when adjusting these two parameters.
- Interfunction Delay is a time delay of transmission of segments in each message string.



PROGRAM

Keyboard Interface Control

Function Key & Key Pad Emulation, Upper/Lower Case Setting, Dollar Sign Control



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Function Key Emulation 	SS SS SS	Enable Keyboard Function Code Table 1 Output ▲ Enable Keyboard Function Code Table 2 Output (Ctrl-Output) Enable Keyboard Function Code Table 3 Output Refer to Appendix – Keyboard Function Code Table for details. Keyboard Function Code Table 3 is only supported by A Series & PA Series.	0 1 2
Key Pad Emulation 	SS SS	Disable key pad emulation ▲ Enable numeric output as key pad (Num Lock On) output	0 1
Upper/Lower Case 	SS SS SS SS	Normal case (neglect the upper/lower case control) ▲ Inverse case (change all characters output to inverse case) Upper case (force all characters output as upper case) Lower case (force all characters output as lower case)	0 1 2 3
Dollar Sign Control 	SS SS SS SS SS	Dollar sign output as "\$" ▲ Dollar sign output as "¥" Dollar sign output as "€" Dollar sign output as "£" Dollar sign output as "¢"	0 1 2 3 4

- The function of "Key Pad Emulation" is only available for IBM PC/AT, PS/VP, PS/2 series personal computers and compatible machines. While selecting the other host interfaces, these selections don't perform the above functions for you.



PROGRAM

Keyboard Interface Control

Code Page: Barcode Encoding Format



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Barcode Encoding Format 	MS	UTF8	00
		Codepage 950	10
		Codepage 949	11
		Codepage 936	12
		Codepage 932	13
		Codepage 874	14
		WIN1250	15
		WIN1251	16
		WIN1252 ▲	17
		WIN1253	18
		WIN1254	19
		WIN1255	1a
		WIN1256	1b
		WIN1257	1c
		WIN1258	1d
		ISO 8859-1 Latin 1, Western European	1e
		ISO 8859-2 Latin 2, Central European	1f
		ISO 8859-3 Latin 3, Southern European	20
		ISO 8859-4 Latin 4, Northern European	21
		ISO 8859-5 Cyrillic	22
		ISO 8859-6 Arabic	23
		ISO 8859-7 Greek	24
		ISO 8859-8 Hebrew	25
		ISO 8859-9 Latin 5, Turkish	26
		ISO 8859-10 Latin 6, Nordic	27
		ISO 8859-11 Thai	28
		ISO 8859-13 Latin 7, Baltic	29

	ISO 8859-14 Latin 8, Celtic	2a
	ISO 8859-15 Latin 9	2b
	ISO 8859-16 Latin 10, South-Eastern European	2c

- **Corresponding Languages:** Please see Appendix below, "Code Page - Table of Corresponding Languages".
- **Barcode Encoding Format:** 2D barcodes can be encoded using different code pages. To properly decode the data of a 2D barcode, the scanner must first be set to the corresponding code page of such data. Select UTF8 if the 2D barcode was encoded in Unicode (UTF-8).



PROGRAM

Keyboard Interface Control

Code Page: Keyboard Output



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Keyboard Output 	MS	Linux Unicode Output MAC Unicode Output WIN Notepad Unicode Output WIN WordPad Unicode Output Codepage 950 Output Codepage 949 Output Codepage 936 Output Codepage 932 Output Codepage 874 Output WIN1250 Output WIN1251 Output WIN1252 Output ▲ WIN1253 Output WIN1254 Output Codepage 852 Output Codepage 855 Output Codepage 866 Output Codepage 850 Output Codepage 437 Output Codepage 737 Output Codepage 857 Output Codepage 862 Output Codepage 720 Output Codepage 775 Output	00 01 02 03 10 11 12 13 14 15 16 17 18 19 30 31 32 33 34 35 36 37 38 39

		WIN1255 Output	1a
		WIN1256 Output	1b
		WIN1257 Output	1c
		WIN1258 Output	1d

- **Keyboard Output:** Different languages use different code pages. For your scanner to properly display the content of a2D barcode, select the codepage that corresponds to the content's language. Please check your system locale setting in Windows and make sure that it also matches this language.
 - 1) **Mac Device Output:** If your host is a Mac device, select "MAC Unicode Output" as the scanner's output setting (the data will be in Unicode). You must also first ensure that your Mac device has the required Unicode Hex Input Setup and is configured for the 16-bit input method. Please see Appendix below, "Code Page - Unicode Hex Input Setup".
 - 2) **WIN Notepad Unicode Output:** If your host is a Windows device, you can output the data in Unicode format to Notepad. You must first ensure that your Windows device has the required Unicode Hex Input Setup, and is set to the US English input method. Please see Appendix below, "Code Page - Unicode Hex Input Setup".
 - 3) **WIN WordPad Unicode Output:** If your host is a Windows device, you can output the data in Unicode format to WordPad. You must first ensure that your Windows device is set to the US English input method.



PROGRAM

Serial Interface Control

STX/ETX Control, Record Suffix, Preamble,
Postamble, FNC1 Symbol Char. Transmission

F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
STX/ETX Control 	SS SS	Disable STX/ETX transmission ▲ Enable STX/ETX transmission STX/ETX are two characters used to indicate the starting and ending of the total data frame transmitted via serial interface.	0 1
Record Suffix 	SS SS SS SS SS SS	None CR (0DH) ▲ LF (0AH) CRLF (0D0AH) TAB (09H) SPACE (20H)	0 1 2 3 4 5
Preamble 	SS MS	None ▲ 1-15 characters Maximum 15-character input; scan "FIN" to terminate this selection.	FIN [00-7F], [FIN]
Postamble 	SS MS	None ▲ 1-15 characters Maximum 15-character input; scan "FIN" to terminate this selection.	FIN [00-7F], [FIN]
FNC1 Symbol Char. Transmit 	SS SS	Disable Enable ▲ When this function is enabled and the FNC1 is contained in scanned data, the scanner transmits the FNC1 to the host. Chart of the FNC1 is provided in Appendix–Keyboard Function Code Table. When the scanner interface is set to keyboard, the scan code is converted to corresponding key function before it is transmitted	0 1

▪ Serial Interface Message String (RS232, USB COM) :

STX	Preamble	Data Length	Prefix Symbol ID	Scanned Data	Suffix Symbol ID	Postamble	ETX	Record Suffix
1 character	1-15 characters	2-4 digits	1 or 3 characters	Variable length	1 or 3 characters	1-15 characters	1 character	1 character



PROGRAM

Serial Interface Control Delay Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Intermessage Delay 	SS MS	None ▲ 1-99 (x5) msec. Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Intercharacter Delay 	SS MS	None ▲ 1-99 (x5) msec. Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)
Interfunction Delay 	SS MS	None ▲ 1-99 (x5) msec. Scan 2 digits from the option code chart in Appendix; then FuzzyScan will terminate this selection automatically.	FIN (2 digits)

- Intermessage Delay is a time delay between messages output by FuzzyScan. Increasing this delay will help host applications process the incoming data on time.
- Intercharacter Delay is a time delay between data characters output by FuzzyScan. These two parameters are used to synchronize data communication when : 1) the data transmission speed is too fast, characters may be skipped; 2) multitasking operation system or host computers in a network may slow down the keyboard handling; 3) various notebook or desktop PC systems require different timing parameter settings. Please always add one extra unit as safety margin when adjusting these two parameters.
- Interfunction Delay is a time delay between transmission and reception of each segment of the message string.



PROGRAM

Serial Interface Control Protocol, ACK/NAK Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Handshaking Protocol 	SS SS SS SS	None (free running mode) ▲ RTS/CTS (hardware handshaking) ACK/NAK (software handshaking) Xon/Xoff (software handshaking)	0 1 2 3
NAK Retry Count 	SS SS	3 times ▲ 0~255 times	FIN (3 digits)
ACK Indication 	SS SS SS SS	Disable ACK Time-out Indication Enable ACK Time-out Indication ▲ Disable ACK Indication ▲ Enable ACK Indication	0 1 2 3

- USB COM doesn't support RTS/CTS handshaking protocol.
- When the ACK/NAK Software Handshaking option is selected, the FuzzyScan waits for an ACK (acknowledge) or NAK (not acknowledge) from the host computer after each data transmission. If the NAK is received, FuzzyScan will re-send the data until receiving ACK.'
- NAK Retry Count
 After transmitting data, the scanner expects a NAK response from the host up to the preset "Serial Response Time-out". If the scanner doesn't get a response, the scanner will issue an error indication and discard the data. When a NAK is received, the scanner transmits the same data again and waits for either an ACK or NAK. The scanner issues an error indication and discards the data under following two conditions:
 1) After preset NAK retry counts is received within the preset serial response time-out.
 2) If the preset time-out is up but the preset NAK retry counts haven't come to the end.
 The default retry counts are three times. If you program "0 time", the scanner won't resend the data to the host when the scanner receives a NAK. The scanner will discard the data. If you program "255 times", the scanner can receive unlimited NAKs from the host within the pre-set serial response time-out.
 This function is not available for batch mode. When you enable this function in on-line mode, the out-of-range function will be disable automatically.
- ACK Indication:
 Disable: There's neither LED nor beeping indication for this setting.
 Enable: There's a specific LED and beeping indication for this setting.



PROGRAM

Serial Interface Control

Response Time-out Setting, Baud Rate, Data Frame



F_DEFAULT

Family Code Selection	P.C	Parameter Selection		Option Code	
Serial Response Time-out 	SS	None	3 seconds	0	6
	SS	200 mseconds	4 seconds	1	7
	SS	500 mseconds ▲	5 seconds	2	8
	SS	800 mseconds	8 seconds	3	9
	SS	1 second	10 seconds	4	A
	SS	2 seconds	15 seconds	5	B
Baud Rate (BPS) 	SS	38.4K BPS	2400 BPS	0	4
	SS	19.2K BPS	1200 BPS	1	5
	SS	9600 BPS ▲	57.6K BPS	2	8
	SS	4800 BPS	115.2K BPS	3	9
Data Frame 	SS	8, None, 1 ▲	7, Space, 1	0	8
	SS	8, Odd, 1	7, Mark, 1	1	9
	SS	8, Even, 1	7, None, 2	2	A
	SS	8, Space, 1	7, Odd, 2	3	B
	SS	8, Mark, 1	7, Even, 2	4	C
	SS	8, None, 2	7, Space, 2	5	D
	SS	7, Odd, 1	7, Mark, 2	6	E
	SS	7, Even, 1		7	

- When the RTS/CTS Hardware Handshaking option is selected, the RTS (request to send) and CTS (clear to send) signals will be issued before normal data communication. This option is very helpful to ensure the reliability of data communication.
- The Serial Response Time-out is a pre-defined delay time for FuzzyScan to wait for handshaking, acknowledgment or non-acknowledgment from the host computer



PROGRAM

Serial Interface Control

Code Page: Barcode Encoding Format, Serial Port Output



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Barcode Encoding Format 		UTF8	00
		Code page 950	10
		Code page 949	11
		Code page 936	12
		Code page 932	13
		Code page 874	14
		WIN1250	15
		WIN1251	16
		WIN1252 ▲	17
		WIN1253	18
		WIN1254	19
		WIN1255	1a
		WIN1256	1b
		WIN1257	1c
	MS	WIN1258	1d
		ISO 8859-1 Latin 1, Western European	1e
		ISO 8859-2 Latin 2, Central European	1f
		ISO 8859-3 Latin 3, Southern European	20
		ISO 8859-4 Latin 4, Northern European	21
		ISO 8859-5 Cyrillic	22
		ISO 8859-6 Arabic	23
		ISO 8859-7 Greek	24
		ISO 8859-8 Hebrew	25
		ISO 8859-9 Latin 5, Turkish	26
		ISO 8859-10 Latin 6, Nordic	27
		ISO 8859-11 Thai	28
		ISO 8859-13 Latin 7, Baltic	29
		ISO 8859-14 Latin 8, Celtic	2a
		ISO 8859-15 Latin 9	2b

		ISO 8859-16 Latin 10, South-Eastern European	2c
Serial Port Output 	MS	Raw Data ▲	00
		Unicode (Big Endian)	01
		Unicode (Little Endian)	02
		UTF8	03
		CP950 Output (Big Endian)	10
		CP949 Output (Big Endian)	11
		CP936 Output (Big Endian)	12
		CP932 Output (Big Endian)	13
		CP874 Output	14
		WIN1250 Output	15
		WIN1251 Output	16
		WIN1252 Output	17
		WIN1253 Output	18
		WIN1254 Output	19
		WIN1255 Output	1A
		WIN1256 Output	1B
		WIN1257 Output	1C
		WIN1258 Output	1D
		CP852	30
		CP855	31
		CP866	32
		CP850	33
		CP437	34
		CP737	35
		CP857	36
		CP862	37
		CP720	38
		CP775	39
		CP950 Output (Little Endian)	90
		CP949 Output (Little Endian)	91
		CP936 Output (Little Endian)	92
		CP932 Output (Little Endian)	93

■ To get multilingual output with the serial interface, please choose correct barcode encoding format and its corresponding serial port output format.



PROGRAM

Operation Control

Operation Mode



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Operation Mode 	SS SS SS SS	Trigger mode Presentation mode ▲ Force mode Multiple Read mode	1 2 9 C

- **Trigger Mode (External Triggering):** The scanner begins its scan session upon a pressed trigger button or receiving a Trigger On serial command. The light source of the scanner keeps on before scanning the barcode. The scan session ends if the scanner successfully decodes a barcode (Good Read), when its trigger button is released, or when a preset Handheld Scan Time-out duration is up. After the scan session ends, the scanner goes into standby state waiting for next scan session.
- **Presentation Mode (Auto Detection):** Under this mode, the scanner keeps its background lighting on and continuously looks for any object approaching in (motion detect state). Once it detects a approaching object, the scanner begins its scan session with its light source fully on. The scan session continues until the scanner successfully decodes a barcode (Good Read) or a preset Presentation Scan Time-out is up. If the session is over because of a successful scan, it re-starts next scan session immediately. If the session is over because time-out duration is up, it changes back to motion detect state and looks for next object approaching in. You can disable Image Sensing Background Lighting if necessary. However, if the ambient light condition in the room is not good enough, the Presentation Mode may not work properly. You can also choose different level of sensibility to meet your application (Please refer to the setting of "Image Sensing Sensitivity").
- **Force Mode (Continued Power On):** The scanner always turns on its light source for continuous operation without triggering. This mode is convenient for high speed barcode reading.
- **Multiple Read Mode:** The scanner begins its scan session upon a pressed trigger button or receiving a Trigger On serial command. The light source of the scanner keeps on before scanning the barcode. The scan session ends if the scanner successfully decodes a barcode (have a Good Read), when its trigger button is released, or when a preset Handheld Scan Time-out duration is up. Once it has a good read, the scanner will emit a beep sound, start a new scan session, and reset the time-out immediately. If the scan session ends because the time-out duration is up or the trigger is released, the scanner will goes into standby state waiting for next scan session. Multiple read mode allows the scanner to decode multiple barcodes with a single press of the trigger. When you press and hold the trigger to aim at a series of barcodes, the scanner decodes each barcode and beep for each good read. For more precise barcode decoding, you are recommended to enable Center Alignment function while multiple read mode is selected. You can also enable Unique Barcode Reporting function to avoid reading the same code multiple times in a same scanning session.
- Operation modes categorized as "Handheld Mode": Trigger mode and Multiple read mode
- Operation modes categorized as "Hands-free Mode": Presentation mode and Force mode..



PROGRAM

Operation Control

Illumination Control, Object Detection Control



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Illumination Control 	SS	Disable	0
	SS	Enable ▲	1
Object Detection Control 	SS	Image sensing; enable "Decode after Good Read"	0
	SS	Image sensing; disable "Decode after Good Read"	1
	SS	Proximity sensing; enable "Decode after Good Read" ▲	2
	SS	Proximity sensing; disable "Decode after Good Read"	3

- The Illumination Control is only available for Trigger mode and Multiple read mode. With it enabled, the illumination LED lights up when user presses the trigger, and vice versa.
- Under Presentation Mode, use Object Detection Control to choose between Image Sensor and Proximity Sensor to detect approaching object. Proximity Sensing provides a more responsive and accurate detection, while Image Sensing provides a longer detection range with wider angle of view. Image Sensing relies on background or ambient lighting to illuminate the target barcode, you can use Image Sensing Background Lighting to turn on or turn off background lighting according to ambient lighting condition.
 - Image Sensing; enable "Decode after Good Read": The scanner uses Image Sensing as the method of object detection. When the scanner finds a barcode and decodes it successfully (have a Good Read), it restarts a new scan session no matter the Image Sensor finds any object approaching in or not.
 - Image Sensing; enable "Decode after Good Read": The scanner uses Image Sensing as the method of object detection. When the scanner finds a barcode and decodes it successfully (have a Good Read), it returns to standby mode and will only starts next scan session when the image sensor detects an object approaching in.
 - Proximity Sensing; enable "Decode after Good Read": The scanner uses Proximity Sensing as the method of object detection. When the scanner finds a barcode and decodes it successfully (have a Good Read), it restarts a new scan session no matter the Proximity Sensor still detects any object within its detection range or not.
 - Proximity Sensing; disable "Decode after Good Read": The scanner uses Proximity Sensing as the method of object detection. When the scanner finds a barcode and decodes it successfully (have a Good Read), it only restarts a new scan session when it detects a new object entering its detection range after the original one leaving the range.



PROGRAM

Operation Control

Background Lighting, Image Sensing Sensitivity



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Background Lighting 	SS SS	LEDs Off ▲ LEDs On	0 1
Image Sensing Sensitivity 	SS SS SS SS SS SS SS	Level 1 Level 2 Level 3 Level 4 Level 5 ▲ Level 6 Level 7	0 1 2 3 4 5 6

- **Background Lighting:** Under presentation mode, you can enable or disable background lighting of the scanner according to the ambient light condition. Be aware that when the ambient light is dim or dark, object detection of the scanner with image sensing may not work properly if you turn off background lighting of the scanner.
- **Image Sensing Sensitivity** is used to configure the sensitivity level of object detection under presentation mode with image sensing. The higher the level is, the longer the effective detecting range of the scanner provides.



PROGRAM

Operation Control

Aiming Control, Pre-decode Aiming Timer, and Decode Aiming Control



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Aiming Control 	SS	Regular Aiming	0
	SS	Intelligent Aiming ▲	1
	SS	Pre-decode Aiming	2
Pre-decode Aiming Timer 	SS	200 ms	0
	SS	400 ms ▲	1
	SS	800 ms	2
	SS	1 sec	3
	SS	1.5 sec.	4
	SS	2 sec.	5
	SS	3 sec.	6
	SS	4 sec.	7
Decode Aiming Control 	SS	Disable in Handheld mode	0
	SS	Enable in Handheld mode ▲	1
	SS	Disable in Hands-free mode ▲	2
	SS	Enable in Hands-free mode	3

- The Aiming Control is available for Trigger mode and Multiple Read Mode.
 - Under Regular Aiming, the aiming light is turned on only when the trigger button is pressed.
 - Under Intelligent Aiming, the aiming light is turned on when the scanner is lifted or detects incoming object. A trigger button press activates decoding process. After 2 seconds of inactivity, the aiming light will be shut off automatically.
 - Pre-decode Aiming provides a time duration for the user to aim the target barcode before the scanner starts to decode. When the user presses and holds the trigger button, the aiming light will be on but the main light source won't until the timer runs out. When the timer runs out, the scanner will turn on its main light source and start to find a barcode to decode. The time duration between the pressed trigger and the start of the scan session can be adjusted by setting Pre-Decode Aiming. The Pre-decode Aiming can help the user to avoid a misreading if the user needs to read a specific barcode when there are other barcodes within close range.
- The Pre-decode Aiming Timer is only effective under Trigger Mode and Multiple Read Mode.
- Use Decode Aiming Control to turn on or turn off the aiming light during the scan session:
 - Under Handheld mode, enable/disable Decode Aiming Control to turn on/off the aiming light when the trigger is pressed.
 - Under Hands-free mode, enable/disable Decode Aiming Control to turn on/off the aiming light when the scanner detects an object and starts a scan session.



PROGRAM

Operation Control

Center Alignment, Unique Barcode Reporting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Center Alignment 	SS	Disable in Handheld Mode	0
	SS	Enable in Handheld Mode ▲	1
	SS	Disable in Hands-frees Mode ▲	2
	SS	Enable in Hands-free Mode	3
Unique Barcode Reporting 	SS	Disable ▲	0
	SS	Enable	1

- **Center Alignment:** When this function is enabled, the scanner only decodes barcode(s) around its aiming dot.
- **Unique Barcode Reporting:** This function is only effective under Multiple Read Mode. When this function is enabled, the scanner will only output data from each distinct barcode once during a scanning cycle (the time duration when the trigger button is pressed and held without release). This prevents the output of repeat data in case a barcode is accidentally read multiple times during the same scanning cycle.



PROGRAM

Operation Control Smart Scene



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Smart Scene 	SS	Scene 1 ▲	0
	SS	Scene 2	1
	SS	Scene 3	2
	SS	Scene 4	3
	SS	Scene 5	4
	SS	Scene 6	5
	SS	Scene 7	6

- Smart Scene optimizes the scanner's motion tolerance, scanning speed and scanning sensitivity in different environments.
 - Scene 1: This is the default setting. It optimizes the scanner's motion tolerance, scanning speed and scanning sensitivity in most working environments.
 - Scene 2: The scanner is optimized for scanning high-density barcodes.
 - Scene 3: This setting is for general retail applications.
 - Scene 4: Another setting also optimized for general retail applications, as well as the performance when scanning barcodes displayed on the screens of devices, especially those with large LCD or with low brightness.
 - Scene 5: An application-specific mode optimizes the scanner for scanning low PCS (print contrast) barcodes on circuit boards.
 - Scene 6: An application-specific mode optimizes the scanner for scanning barcodes on circuit boards with sufficient ambient light.
 - Scene 7: An application-specific mode optimizes the scanner for scanning barcodes from the mobile device screens.



PROGRAM

Operation Control

Speaker Tone and Volume Adjust, Power On and Good Read Indicator Control



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Speaker Tone Adjust 	SS	Buzzer tone – mute	0
	SS	Buzzer tone – low (Frequency 1.20 kHz)	1
	SS	Buzzer tone – medium(Frequency 2.70 kHz) ▲	2
	SS	Buzzer tone – high (Frequency 2.81 kHz)	3
	SS	Buzzer tone - extremely high (Frequency 2.93 kHz)	4
	SS	Power-on beep ▲	5
	SS	No power-on beep	6
Speaker Volume 	SS	Low	0
	SS	Medium	1
	SS	High ▲	2
Power On Indicator 	SS	Disable (LED off)	0
	SS	LED steady on ▲	1
	SS	LED flash	2
Good Read Indicator 	SS	Disable	0
	SS	Enable ▲	1



PROGRAM

Operation Control
1D Code Inverse Reading



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
1D Barcode Inverse Reading 	SS SS	Disable ▲ Enable	0 1

- With 1D Barcode Inverse Reading enabled, besides traditional 1D barcode with darker lines over lighter background, the scanner can also read inversed 1D barcode consist of lighter lines over darker background. Be aware this function may slow down the decoding speed under certain conditions.



PROGRAM

Operation Control

Reread Delay, Good Read Delay Control, and Good Read Duration



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Reread Delay (Double Scan Verification) 	SS	Disable	0
	SS	Immediate time out ▲	1
	SS	Short time out	2
	SS	Medium time out	3
	SS	Long time out	4
	SS	Force verification	5
Good Read Delay 	SS	None ▲	0
	SS	200 msec.	1
	SS	500 msec.	2
	SS	1 sec.	3
	SS	1.5 sec.	4
	SS	2 sec.	5
	SS	3 sec.	6
Good Read Duration 	SS	Short	0
	SS	Medium ▲	1
	SS	Long	2
	SS	Extremely long	3
	SS	Extremely short	4

- The Reread Delay (Double Scan Verification) is designed to inhibit FuzzyScan from reading the same barcode twice in pre-defined short duration. Force Verification will not allow reading of the same barcode twice.
- This Good Read Delay is the minimum amount of time before the scanner can read another barcode.
- Use Good Read Duration to adjust the length of good read beeps according to user preference and work environment.



PROGRAM

Operation Control

Light Source On Time and Hands-free Time-out



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Light Source On Time 	SS SS SS SS SS SS	Extremely short ▲ Immediate Short Medium Long Extremely long	0 1 2 3 4 5
Hands-free Time-out 	SS SS SS SS SS	Short ▲ Medium Long Extremely long Disable	0 1 2 3 4

- The Light Source On Time is a pre-defined timer for the scan session under presentation mode. The scanner keeps looking for barcode to decode until the timer out. If the scanner cannot decode any barcode successfully before the time duration is up, the result will be classified as a "No Good read" (NG).
- Operation modes categorized as "Hands-free Mode" include Presentation Mode and Force Mode. The Hands-free mode will be automatically changed to trigger mode when you press the trigger button. You can decide how long the scanner remains in trigger mode by setting the Hands-free Time-out. Once the time-out duration is up (if there's no any trigger operation), the scanner will revert to the original Hands-free mode.



PROGRAM

Operation Control

OK/NG Beep Control, NG, Object-in, and Object-out Message Output



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
OK/NG Beep Control 	SS SS SS SS	Disable OK and NG beep Enable OK and NG beep Enable OK beep while disable NG beep ▲ Enable NG beep while disable OK beep	0 1 2 3
NG Message Output 	SS SS MS	None ▲ Message "NG" User defined message (1~15 characters) Maximum 15-character input; scan "FIN" to terminate this section.	0 1 2, [00- 7F]
Object-in Message Output 	SS SS MS	None ▲ Message "OBJECT_IN" with CRLF User defined message (1~15 characters) Maximum 15-character input; scan "FIN" to terminate this section.	0 1 2, [00- 7F]
Object-out Message Output 	SS SS MS	None ▲ Message "OBJECT_OUT" with CRLF User defined message (1~15 characters) Maximum 15-character input; scan "FIN" to terminate this section.	0 1 2, [00- 7F]

- The NG Beep and NG Message Output are only available under Presentation Mode.
- With NG Message Output enabled under Presentation Mode, if the scanner cannot successfully find and decode any barcode within a time duration (the Light Source On Time) after it is triggered, it stops the scan session and sends out a pre-defined NG (No Good read) message to the host equipment.
- Object-in Message Output is available under presentation mode either with Image Sensing or with Proximity Sensing. With this function enabled, once the scanner detects any object entering its detection range, it sends out a predefined message to the host when it starts a scan session.
- Object-out Message Output is only available under presentation mode with Proximity Sensing. With this function enabled, once the scanner finds that the detected object exiting its detection range, it sends out a predefined message to the host.



PROGRAM

Operation Control

Batch Reading



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Batch Reading 	SS	Disable ▲ Enable	[FIN] [Rules] [FIN]

▪ **Batch Reading:** Before enabling the function, please use FuzzyScan PowerTool software to set up “Batch Reading” rule. When this function is enabled, you can scan multiple barcodes one by one continuously upon one trigger event. The scanner reports a good read beep and indication only if all barcodes set by the “Batch Reading” rules are read. Otherwise, the scanner reports an error beep and indication. The scanned data will be transmitted according to the preset sequence which is defined in “Batch Reading” rules regardless the scanned order of those barcodes.

▪ **Batch Reading Rule:**

- To set the Batch Reading rule
 1. Scan the PROGRAM symbol.
 2. Scan the Batch Reading symbol (Family Code).
 3. Use the Option Code to define the preset Batch Reading rule.
 4. Scan the FIN symbol.
 5. Scan the END symbol to save your Batch Reading rule.

Note: Scan the ABORT and END symbol to exit without saving any Batch Reading rule setting.
- When you scan “None”, the preset Batch Reading Rule will be cancelled.
- Batch Reading Rule Syntax:
 [n] [Element 1] FF [Element 2] FF [Element 3] FF ... [Element n] FF
 Where n is the number of elements in the overall rule. The number of elements is up to 16. FF indicates the end of one element.
- Element structure:
 [Cino ID Hex value] [Code length] [Character match(es)]
 Where:
 - [Cino ID Hex value]
 Length: 2 byte
 Please find Cino ID hex value from Symbology ID Table in appendix. Locate the Hex value for the symbology and scan the 2 digit hex values from the Option Code.
 Note: 99 is the universal number, indicating all symbologies.

- [Code length]
Length: 4 byte
Specify what length of data output will be acceptable for this symbology. When you calculate the length, you must consider the whole data string which includes the programmed Preamble, Postamble, Scanned Data Length, Prefix/Suffix Symbol ID or AIM ID. Scan the four digit data length from the Option Code.
Note: 40 characters is entered as 0040; 9999 is a universal number, indicating all lengths.
- [Character match]
Length: 2-8 byte
You can refer to HEX/ASCII Reference Table to find the Hex value that represents the character(s) you want to match. Use the Option Code to scan the alphanumeric combination that represents the ASCII characters. You can match up to 4 characters which are counted from the start character of the whole Data String.
Note: When setting the matched character(s), you must match the content of the whole Data String, including the programmed Preamble, Postamble, Scanned Data Length, Prefix/Suffix Symbol ID OR AIM ID if you had defined. FF is the universal character, indicating all characters.
- Batch Reading rule example
In this example, you are scanning Code 39, Code 128, and Code 93 barcodes, but you would like to output the data in following sequence:
Code 128 - Code 39 - Code 93



B-CODE39



A-CODE128



C-CODE93

You would set up the Batch Reading rule with the following command line:

```
[PROGRAM] [Batch Reading] [0301999941FF07999942FF09999943FF] [FIN] [END]
```

The breakdown of the command line is shown below:

03	The number of elements in the overall rule
01	Code identifier of Code 128
9999	Code length that must match for Code 128, 9999 = all lengths
41	Start character match for Code 128, 41h = "A"
FF	End of first code
07	Code identifier of Code 39
9999	Code length that must match for Code 39, 9999 = all lengths
42	Start character that must match for Code 39, 42h = "B"
FF	End of second code
09	Code identifier of Code 93
9999	Code length that must match for Code 93, 9999 = all lengths
43	Start character match for Code 93, 43h = "C"
FF	End of third code

To program the previous example using specific lengths, you would have to count the programmed Preamble, Postamble, Scanned Data Length, Prefix/Suffix Symbol ID OR AIM ID if you had defined as part of the length. If you enable the Suffix Symbol ID of symbology, you would add one character to the previous example's length.

You would set up the Batch Reading rule with the following command line:

```
[PROGRAM] [Batch Reading] [0301001041FF070009FF09000943FF] [FIN] [END]
```

The breakdown of the command line is shown below:

03	The number of elements in the overall rule
01	Code identifier of Code 128
0010	Code length that must match for Code 128 A-CODE128 sample length (9) plus Suffix Symbol ID (1) = 10
41	Start character match for Code 128, 41h = "A"
FF	End of first code
07	Code identifier of Code 39
0009	Code length that must match for Code 39 B-CODE39 sample length (8) plus Suffix Symbol ID (1) = 9
FF	Universal matched character, indicating all character Also indicate end of second code
09	Code identifier of Code 93
0009	Code length that must match for Code 93 C-CODE93 sample length (8) plus Suffix Symbol ID (1) = 9
43	Start character match for Code 93, 43h = "C"
FF	End of third code

Note: If the [Character match (es)] is set to "FF", the following "FF" which indicated the end of the code was not need to set.

- Structure of Data String

STX (RS232/USB COM interface)	Preamble	Scanned Data Length	Prefix Symbol ID Or Prefix AIM Symbol ID	Scanned Data modified by DataWizard	Suffix Symbol ID Or Suffix AIM Symbol ID	Postamble	ETX (RS232/USB COM interface)
1 character	1-15 characters	2-4 digits	1 or 3 characters	Variable length	1 or 3 characters	1-15 characters	1 character



PROGRAM

Condensed DataWizard

Preamble, Postamble, Data Length, Symbol ID Transmission



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code
Preamble 	SS MS	None ▲ 1-15 characters Maximum 15-character input; scan "FIN" to terminate this selection.	FIN [00-7F], [FIN]
Postamble 	SS MS	None ▲ 1-15 characters Maximum 15-character input; scan "FIN" to terminate this selection.	FIN [00-7F], [FIN]
Data Length Transmission 	SS SS	Disable ▲ Enable 2~4 digits data length transmission	0 1
Symbology ID Transmission 	SS SS SS SS SS SS SS	Disable symbology ID transmission ▲ Enable prefix symbology ID transmission Enable suffix symbology ID transmission Enable both prefix and suffix symbology ID transmission Enable prefix AIM symbology ID transmission Enable suffix AIM symbology ID transmission Enable both prefix and suffix AIM symbology ID transmission	0 1 2 3 4 5 6

- DataWizard is the most powerful, Artificial-Intelligence based data editing expert system provided specially for the FuzzyScan family barcode readers. Through DataWizard, you can process the scanned data prior the transmissions in many ways as Insert, Delete, Match, Verify, Replace, Reorganize, and Repeat Transmission. It will help you to arrange the transmission of scanned data to any specific format without software modification.
- Due to the resources concern, Full-feature DataWizard is only supported by PowerTool. Through the PowerTool, all settings and configurations can be done on-screen on Windows-based operating system.
- A Condensed Version DataWizard is provided by each FuzzyScan scanner. Through this menu, the condensed DataWizard can be utilized easily via barcode menu readings.
- Please note that all "Character" input should be referred to the ASCII/HEX Table listed in Appendix to find matched HEX value.
- If you have any problem to use DataWizard, please refer to following pages for details, as well as consult your local FuzzyScan vendor or our web site for further assistance.



PROGRAM

Condensed DataWizard Data Formatter Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code	2ndOption Code
Formatter Control 	SS MS MS	Disable ▲ Select one barcode symbology Select all barcode symbologies	FIN (2 digits) 00	automatic termination automatic termination
1st Insertion 	SS DS	Disable ▲ Enable 2-digits identified position; max. 3 insertion characters	FIN (2 digits) position	[1-3 characters], [FIN]
2nd Insertion 	SS DS	Disable ▲ Enable 2-digits identified position; max. 3 insertion characters	FIN (2 digits) position	[1-3 characters], [FIN]
3rd Insertion 	SS DS	Disable ▲ Enable 2-digits identified position; max. 3 insertion characters	FIN (2 digits) position	[1-3 characters], [FIN]
4th Insertion 	SS DS	Disable ▲ Enable 2-digits identified position; max. 3 insertion characters	FIN (2 digits) position	[1-3 characters], [FIN]

- The Data Formatter is used to edit the scanned raw data prior to transmitting the data to the host computers or terminals. It allows you to select desired barcode symbologies for formatter control, and provides Multiple Position Insertion and Multiple Character Insertion (max three characters) in the identified position.
- While the Data Formatter is enabled, it arranges only scanned data without Preamble, Postamble, STX, ETX, Data Length, Prefix/Suffix Symbology ID or Record Suffix. All of the above programmable parameters perform the same function depending on your setting.
- Regarding the "Barcode Selection" and "Position Calculation" of data formatter, please refer to page 75 for details.
- Please note that all "Character" input should be referred to the ASCII/HEX Table listed in Appendix to find matched HEX value.



PROGRAM

Condensed DataWizard Data Verifier Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code	2ndOption Code
Verifier Control 	SS MS MS	Disable ▲ Select one barcode symbology Select all barcode symbologies	FIN (2 digits) 00	automatic termination automatic termination
Identified Data Length 	SS DS	Disable ▲ Enable Determine the identified data length for verification.	FIN (2 digits)	
1st Identified Character 	SS DS	Disable ▲ Enable 2-digits checking position; 1 identified character	FIN (2 digits) position	[00-7F]
2nd Identified Character 	SS DS	Disable ▲ Enable 2-digits checking position; 1 identified character	FIN (2 digits) position	[00-7F]
3rd Identified Character 	SS DS	Disable ▲ Enable 2-digits checking position; 1 identified character	FIN (2 digits) position	[00-7F]

- The Data Verifier is used to provide advanced verification for error-free scanning and to work as an Embedded Data Transmitting Filter.
- All data must conform to the Identified Barcode Symbologies, Identified Data Length, and one to three Identified Characters in the checking position. Otherwise, the FuzzyScan will not transmit the data to the host computers or terminals, but will instead issue 3 long beeps for verification error and skip the scanned data.
- The Data Verifier checks only scanned data without Preamble, Postamble, STX, ETX, Data Length, Prefix/Suffix Symbology ID or Record Suffix.
- Regarding the “Barcode Selection” and “Position Calculation” of Data Verifier, please refer to page 75 for details.
- Please note that all “Character” input should be referred to the ASCII/HEX Table listed in Appendix to find matched HEX value.



PROGRAM

Condensed DataWizard Data Replacer Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code	2ndOption Code
Replacer Control 	SS MS MS	Disable ▲ Select one barcode symbology Select all barcode symbologies	FIN (2 digits) 00	automatic termination automatic termination
1st Replacement 	SS DS	Disable ▲ Enable 2-digits identified position; 1 replacement character	FIN (2 digits) position	[00-7F]
2nd Replacement 	SS DS	Disable ▲ Enable 2-digits identified position; 1 replacement character	FIN (2 digits) position	[00-7F]
3rd Replacement 	SS DS	Disable ▲ Enable 2-digits identified position; 1 replacement character	FIN (2 digits) position	[00-7F]

- The Data Replacer is used to edit the scanned raw data prior to transmitting the data to the host computers or terminals. It allows you to select desired barcode symbologies for replacer control, and provides Multiple Position Replacement in the identified position.
- All data must conform to the Identified Barcode Symbologies, and one to three Identified Characters in the identified position. While the Data Replacer is enabled, it arranges only scanned data without Preamble, Postamble, STX, ETX, Data Length, Prefix/Suffix Symbology ID or Record Suffix.
- Regarding the “Barcode Selection” and “Position Calculation” of Data Replacer, please refer to page75 for details.
- Please note that all “Character” input should be referred to the ASCII/HEX Table listed in Appendix to find matched HEX value.



PROGRAM

Condensed DataWizard Data Organizer Setting



F_DEFAULT

Family Code Selection	P.C	Parameter Selection	Option Code	2nd Option Code
Organizer Control 	SS MS MS	Disable ▲ Select one barcode symbology Select all barcode symbologies	FIN (2 digits) 00	Automatic termination Automatic termination
1st Organization 	SS DS	Disable ▲ Enable 2-digits identified position; Forward/backward data transmission setting	FIN (2 digits) position direction	0 (Forward) ▲ 1 (Backward)
2nd Organization 	SS DS	Disable ▲ Enable 2-digits identified position; Forward/backward data transmission setting	FIN (2 digits) position direction	0 (Forward) ▲ 1 (Backward)
Include/Exclude Control 	SS DS	Transmitted data excluded the data of identified position ▲ Transmitted data included the data of identified position	0 1	

- The Data Organizer is used to edit the scanned raw data prior to transmitting the data to the host computers or terminals. It allows you to select desired barcode symbologies for organizer control, and provides maximum two identified positions to send the data **forward** or **backward**. It also allows you to control the transmitted data including or excluding the data of identification position. Please refer to the application example listed in page 75 for details.
- While the Data Organizer is enabled, it arranges only scanned data without Preamble, Postamble, STX, ETX, Data Length, Prefix/Suffix Symbology ID or Record Suffix.
- Regarding the “Barcode Selection” and “Position Calculation” of Data Organizer, please refer to page 75 for details.
- Please note that all “Character” input should be referred to the ASCII/HEX Table.

Select a Barcode Symbology

You can select one or all types of barcode symbologies to use Condensed DataWizard for advanced transmission arrangement. If you scan “00” to select all types, the FuzzyScan will arrange all incoming data to meet your pre-defined format. If you want to select only one type barcode, please select one of the option code listed below.

1D Barcode Symbology			
Code 128	01	Matrix 2 of 5	38
GS1-128	31	Interleaved 2 of 5	48
UPC-A	02	China Postal Code	58
UPC-A with 2 supplement	32	German Postal Code	68
UPC-A with 5 supplement	42	Standard/Industrial 2 of 5	08
UPC-E	03	Code 93	09
UPC-E with 2 supplement	33	Code 11	10
UPC-E with 5 supplement	43	MSI/Plessey	11
EAN-13	04	UK/Plessey	12
EAN-13 with 2 supplement	34	Telepen	13
EAN-13 with 5 supplement	44	GS1 DataBar	14
EAN-8	05	GS1 DataBar Limited	22
EAN-8 with 2 supplement	35	GS1 DataBar Expanded	23
EAN-8 with 5 supplement	45	Composite Codes	24
Codabar/NW-7	06	IATA	15
Code 39	07	Coupon Code	16
Code 32	37	PDF417	17
Trioptic Code 39	47	Micro PDF417	25
		Codablock F	18
		Code 16K	19
		Code 49	20

2D Barcode Symbology			
QR Code	A0	MaxiCode	A2
Micro QR Code	A0	Aztec Code	A3
DataMatrix	A1	Chinese Sensible Code	A4
GS1 DataMatrix	A5		

Postal Code			
Korea Post Code	21	Japanese Post	B4
Australian Post	B0	KIX Post	B5
British Post	B1	Planet Code	B6
Intelligent Mail barcode	B3	Postnet	B8

Position Calculation

[Data Formatter]

If there is a 5-character input data string, refer to the following to calculate the actual position for insertion:

	X		X		X		X		X	
00		01		02		03		04		05

[Data Verifier, Data Replacer, Data Organizer]

If there is a 11-character data string, please refer to the following to calculate the actual position for identification.

X	X	X	X	X	X	X	X	X	X	X
00	01	02	03	04	05	06	07	08	09	10

Application Example

If your barcode label is a 16-digit Interleaved 2 of 5 which includes the information of 6-digit date code, 6-digit serial number and 4-digit unit price, you want the FuzzyScan do the following for you without software modification:

- Apply only Interleaved 2 of 5 to the condensed DataWizard.
- Check barcode is actually with 16-digit length.
- Allow barcode output whose date code is leading with “9”.
- Three outputs with “TAB” suffix.
- The date code output should skip “9” and replaced it by “A”.
- The serial number output should be led with “SN”.
- The unit price output should be skipped the first 2 digits.
- Test Barcode : 9 8 1 0 2 51 2 3 4 5 69 8 7 6
- Actual Output : **A81025[TAB]SN123456[TAB]76[TAB]**

Programming Procedure

[Data Verifier]

- Scan “Program” to enter the programming mode.
- Scan “Verifier Control” and set barcode symbology to “48” (Interleaved 2 of 5).
- Scan “Identified Data Length” and set the length to “16”.
- Scan “1st Identified Character” and set the identified position to “00”, then set the identified character to “39” (Hex Code of 9).

[Data Formatter]

- Scan “Formatter Control” and set barcode symbology to “48”.
- Scan 1st Insertion” and set the identified position to “06”, then inserted characters to “09” (Hex Code of TAB), “53” (Hex Code of S), “4E” (Hex Code of N).
- Scan “2nd Insertion” and set the identified position to “12”, then inserted character to “09”. In the final, you must scan “FIN” (Finish) code to terminate this selection.
- Scan “3rd Insertion” and set the identified position to “16”, then inserted character to “09”. In the final, you must scan “FIN” (Finish) code to terminate this selection.

[Data Replacer]

- Scan “Replacer Control” and set barcode symbology to “48”.
- Scan “1st Replacement” and set the identified position to “00”, then replaced character to “41” (Hex Code of A).

[Data Organizer]

- Scan “Organizer Control” and set barcode symbology to “48”.
- Scan “1st Organization” and set the identified position to “16”, then set the data transmission to “0” (forward).
- Scan “2nd Organization” and set the identified position to “17”, then set the data transmission to “1” (backward).
- Scan “END” (Exit) to terminate the programming.

[Important Notice]

Please note that Condensed DataWizard will follow the preset working flow as below:

Verifier » Formatter » Replacer » Organizer

So when you set the identified position in Data Organizer, you must consider the inserted data which you already set via Data Formatter.

APPENDIX

Symbology ID Table

Each AIM Code Identifier contains the three-character string **Jcm** where:

J = Flag Character; **c** = Code Character; **m** = Modifier Character

1D Symbology ID Table											
Code Family	Primary Format	Cino ID		AIM ID		Code Family	Primary Format	Cino ID		AIM ID	
		Hex Value	Char.	Code Char.	Modified Char.			Hex Value	Char.	Code Char.	Modified Char.
UPC	UPC-A	2	A	E	0	EAN/JAN	EAN/JAN-8	05	N	E	4
	UPC-A with 2 suppl.	32			1		EAN/JAN-8 with 2 suppl.	35			1
	UPC-A with 5 suppl.	42			2		EAN/JAN-8 with 5 suppl.	45			2
	UPC-E	3	E		0		EAN/JAN-13	04	F	E	0
	UPC-E with 2 suppl.	33			1		EAN/JAN-13 with 2 suppl.	34			1
	UPC-E with 5 suppl.	43			2		EAN/JAN-13 with 5 suppl.	44			2
	Example: A UPC-A barcode 012345678950 with 2 supplement 12 is transmitted as J E0012345678950 E112							Example: A EAN/JAN-8 barcode 49123562 with 5 supplement 12345 is transmitted as J E449123562 E212345			
	Code 128	Code 128	01	B	C	m	Code 93	Code 93	09	H	G
GS1-128		31	C	1		Code 11	Code 11	10	P	H	m
Codabar	Codabar/NW-7	06	D	F	m	MSI/Plessey	MSI/Plessey	11	R	M	m
Code 25	Standard/Industrial 2 of 5	08	I	S	0	UK/Plessey	UK/Plessey	12	S	P	0
	Matrix 2 of 5	38	K	X	0	Telepen	Telepen	13	T	B	m
	Interleaved 2 of 5	48	J	I	m	GS1 DataBar	GS1 Databar	14	X	e	m
							GS1 DataBar Limited	22			
							GS1 DataBar Expanded	23			
	China Postal Code	58	L	X	0	Composite	Composite Code	24			
German Postal Code	68	M	I	m	Code 39	Code 39	07	G	A	m	
						Code 39 Trioptic	47	W	X	0	
IATA	IATA	15	O	R	m		Code 32	37	G	A	0
UCC Coupon	UCC Coupon Code	Z				PDF417	PDF417	17	V	L	m
						Micro PDF417	25				
	Example : A UPC-A 512345678900 + GS1-128 81010123451297 barcode is transmitted as J E0512345678900 C181010123451297 Example: A EAN-13 9923456789019 + GS1-128 81010123451297 barcode is transmitted as J E09923456789019 C181010123451297					Codablock	Codablock F	18	Y	O	m
						Korea Post	Korea Post Code	21	a	X	0
Remark: Above examples are given for the transmission of AIM ID.											

2D Symbology ID Table											
Code Family	Primary Format	Cino ID		AIM ID		Code Family	Primary Format	Cino ID		AIM ID	
		Hex Value	Char.	Code Char.	Modified Char.			Hex Value	Char.	Code Char.	Modified Char.
QR Code	QR Code	A0	b	Q	m	British Post	British Post	B1	h	X	0
Micro QR Code	Micro QR Code					Intelligent Mail barcode	Intelligent Mail barcode	B3	j		0
Data Matrix	Data Matrix	A1	c	d	m	Japanese Post	Japanese Post	B4	k		0
	GS1 Data Matrix	A5									
MaxiCode	MaxiCode	A2	d	U	m	KIX Post	KIX Post	B5	l		0
Aztec Code	Aztec Code	A3	e	z	m	Planet Code	Planet Code	B6	m		0
Chinese Sensible	Chinese Sensible	A4	f	X	0	Postnet	Postnet	B8	o		0
Australian Post	Australian Post	B0	g		0						

Keyboard Function Code Table

No.	ANSI	ASCII	Key Function 1	Key Function 2	Key Function 3*
00	NUL	00H	RESERVED	Ctrl + @	CTRL MAKE (Left)
01	SOH	01H	CTRL (Left)	Ctrl + A	CTRL BREAK (Left)
02	STX	02H	ALT (Left)	Ctrl + B	ALT MAKE (Left)
03	ETX	03H	SHIFT	Ctrl + C	ALT BREAK (Left)
04	EOT	04H	CAPS LOCK	Ctrl + D	CAPS LOCK
05	ENQ	05H	NUM LOCK	Ctrl + E	NUM LOCK
06	ACK	06H	ESC	Ctrl + F	ESC
07	BEL	07H	F1	Ctrl + G	F1
08	BS	08H	BACK SPACE	Ctrl + H	BACK SPACE
09	HT	09H	TAB	Ctrl + I	TAB
10	LF	0AH	F2	Ctrl + J	F2
11	VT	0BH	F3	Ctrl + K	F3
12	FF	0CH	F4	Ctrl + L	F4
13	CR	0DH	ENTER (CR)	Ctrl + M	ENTER (CR)
14	SO	0EH	F5	Ctrl + N	F5
15	SI	0FH	F6	Ctrl + O	F6
16	DLE	10H	F7	Ctrl + P	F7
17	DC1	11H	F8	Ctrl + Q	F8
18	DC2	12H	F9	Ctrl + R	F9
19	DC3	13H	F10	Ctrl + S	F10

No.	ANSI	ASCII	Key Function 1	Key Function 2	Key Function 3
20	DC4	14H	F11	Ctrl + T	WIN MAKE (Left)
21	NAK	15H	F12	Ctrl + U	WIN BREAK (Left)
22	SYN	16H	INS (Insert) (Edit)	Ctrl + V	SHIFT MAKE (Left)
23	ETB	17H	DEL (Delete) (Edit)	Ctrl + W	SHIFT BREAK (Left)
24	CAN	18H	HOME (Edit)	Ctrl + X	HOME (Edit)
25	EM	19H	END (Edit)	Ctrl + Y	END (Edit)
26	SUB	1AH	PAGE UP (Edit)	Ctrl + Z	PAGE UP (Edit)
27	ESC	1BH	PAGE DOWN (Edit)	Ctrl + [	PAGE DOWN (Edit)
28	FS	1CH	UP (Edit)	Ctrl + \	UP (Edit)
29	GS	1DH	DOWN (Edit)	Ctrl +]	DOWN (Edit)
30	RS	1EH	LEFT (Edit)	Ctrl + 6	LEFT (Edit)
31	US	1FH	RIGHT (Edit)	*see below note	RIGHT (Edit)

 To emulate the keyboard function key input for user definable parameters, user must configure actual content using the **Reserved ASCII00– 31** characters, and also **Enable** the “Function Key Emulation”. Otherwise, the Ctrl output will be done by the scanner. Please refer to the above Keyboard Function Code Table which is for IBMPC/XT/AT, PS/2, PS/VP, COMPAQ PC, HP Vectra PC, Notebook PC, APPLE and PowerMac, and WYSE PC Enhanced or fully compatible machines.

 The last character in the Ctrl Output column is varied for different countries.

Country (refer to Keyboard Layout)& Character					
United State	-	Switzerland	-	France	=
Belgium	-	UK	-	Germany	-
Sweden	-	Denmark	-	Norway	-
Spain	-	Italy	-		

Code Page - Table of Corresponding Languages


Description	Code Page	Description	Code Page
Albanian	850	Hungarian	852
Arabic	1256	Icelandic	850
Arabic	720	Italian	850
Baltic	1257	Japanese	932
Bulgarian	866	Korean	949
Catalan	850	Latin 1	1252
Croatian	852	Latin 2	1250
Cyrillic	1251	Latin 5	1254
Czech	852	Latin American	850
Danish	850	Latvian	775
Dutch	850	Lithuanian	775
Estonian	775	Norwegian	850
English - United Kingdom	850	Polish	852
English - Australia	850	Portuguese	850
English - Canada	850	Romanian	852
English - New Zealand	850	Russian	866
English - United States	437	Serbian	855
English - South Africa	437	Slovakian	852
English - Philippines	437	Slovenian	852
Finnish	850	Spanish	850
French	850	Swedish	850
German	850	Chinese (Tradition)	950
Greece	737	Chinese (Simple)	936
Greece	1253	Thai	874
Hebrew- write	1255	Turkish	857
Hebrew Israel	862	Vietnamese	1258

Code Page - Unicode Hex Input Setup


1. Windows-Setting up the Windows Registry

Step 1:Open the Registry Editor. You can do so by typing “regedit” in the “Search Windows” function or in Command Prompt.


Step 2:Go to HKEY_CURRENT_USER\Control Panel\Input Method

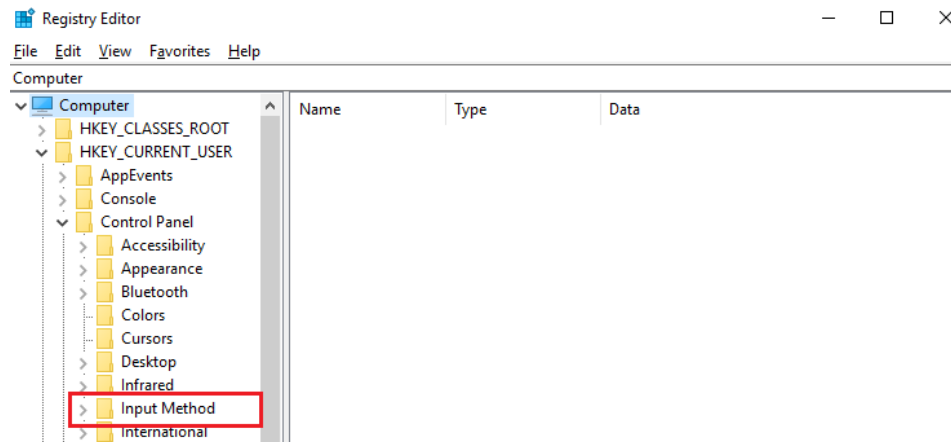

Step 3: Right-click on mouse or press shift + F10 (on keyboard) to add a new String Value (of type “REG_SZ”).

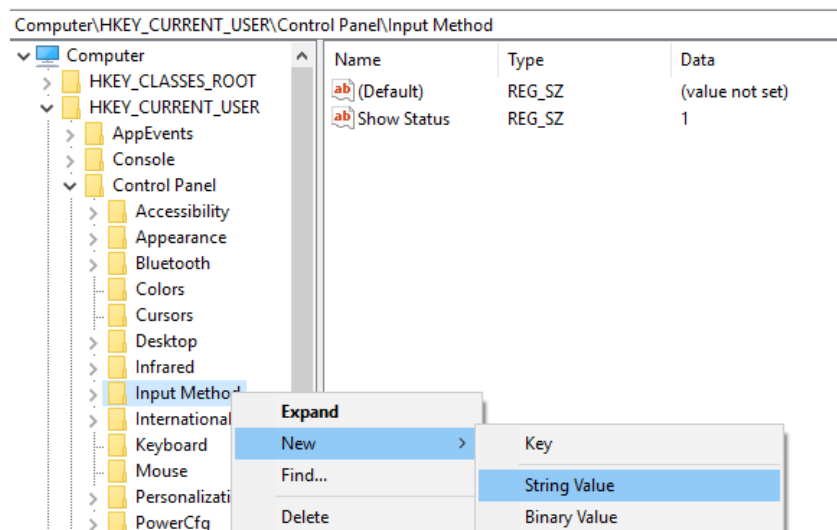


Step 4: Name the new String value as “EnableHexNumpad” and set its Value data to “1”.

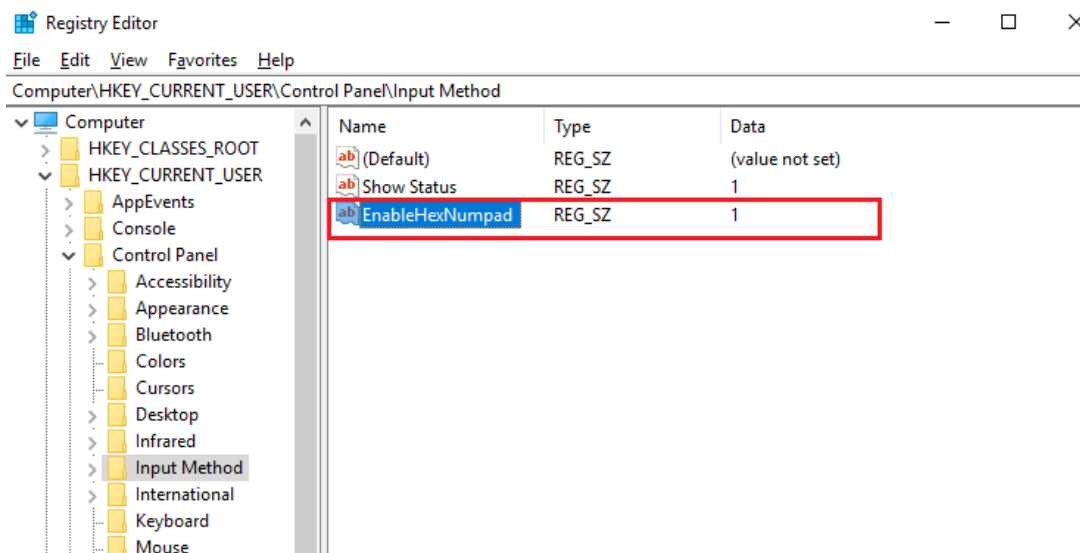


Step 5: Reboot the computer.

2. MAC - Adding Unicode Hex Input in menu bar

Step 1: Go to the Apple Menu -> System Preferences -> Keyboard

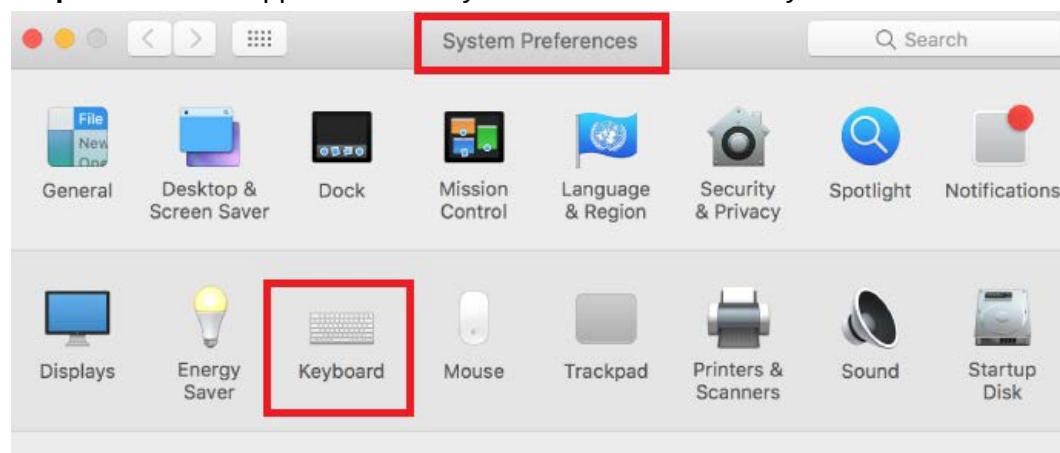


Step 2: On the Keyboard tab, click on “Input Sources” and check the “Show Input menu in menu bar” box.

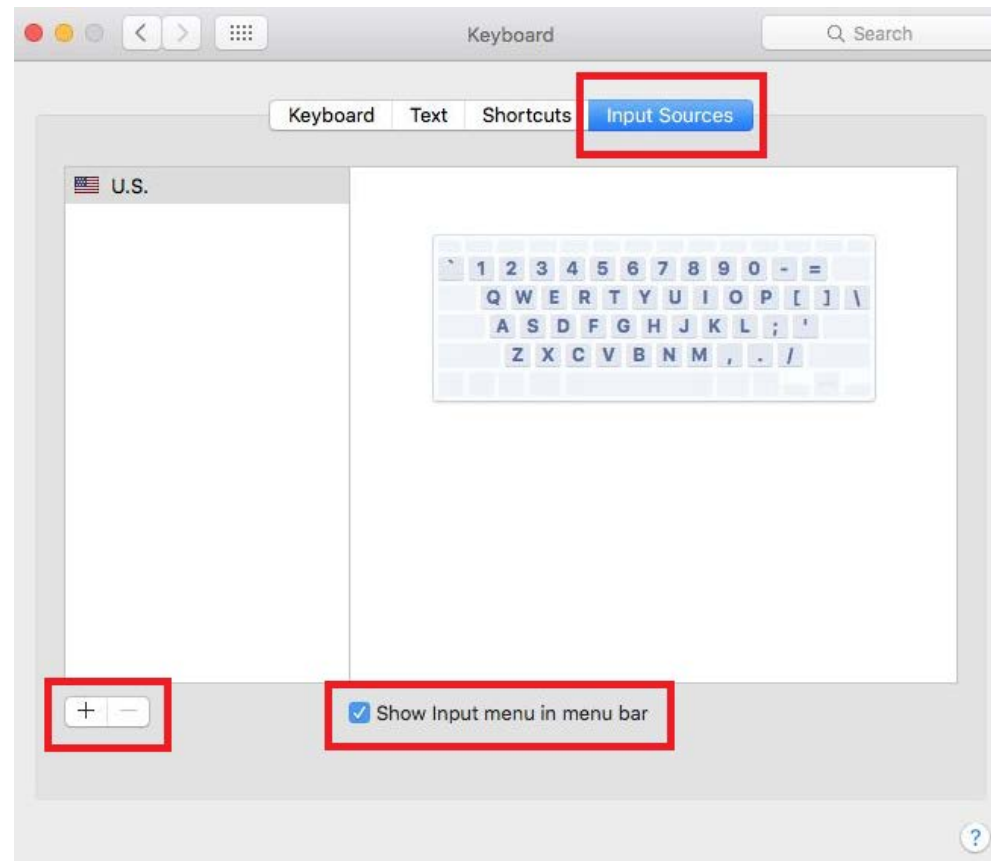


Step 3: Click the “+” button to add an input source.

Step 4: Scroll to and select “Others”. Click on “Unicode Hex Input” (you can also use the Search function to find it). When done, click on the “Add” button.

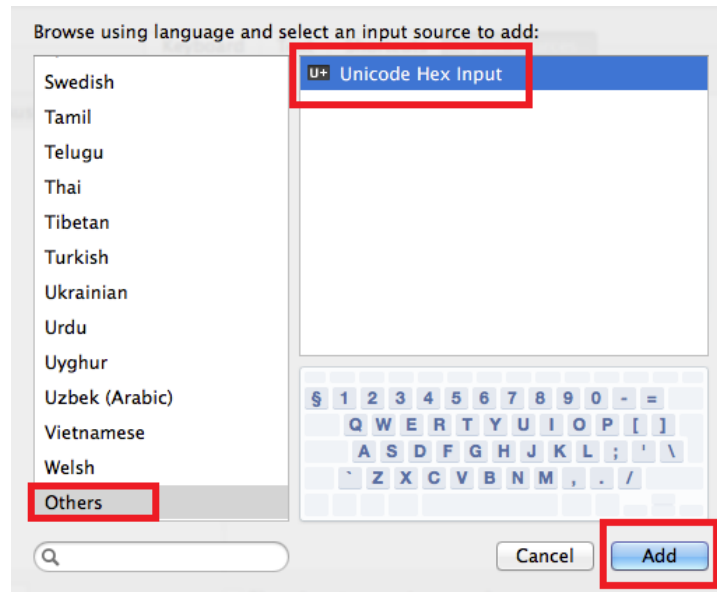

Step 5: Close the Keyboard Preferences menu.

Step 6: Change the input selection to Unicode Hex Input in menu bar.

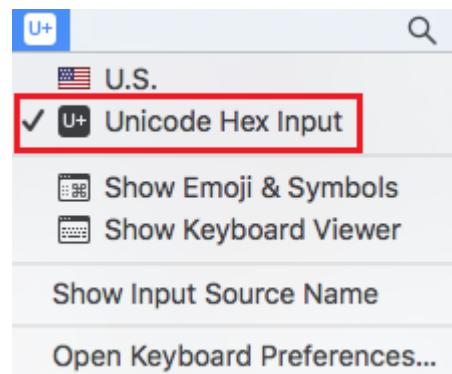

ASCII Input Shortcut

To configure the user definable parameters of FuzzyScan via programming menu, FuzzyScan will ask you to scan your desired ASCII value in **HEX** form. You have to refer to the “**HEX/ASCII Table**” for details.

Example:

If you want the scanned data output leading with a Dollar Sign, you have to set the “Preamble” to “\$”. The configuration procedure is listed below for reference.

- Scan the system command – **PROGRAM** listed on page 3-24 to enter programming mode.
- Scan family code – **PREAMBLE** to select this family.
- Refer to the **Hex/ASCII Table**, you will find the HEX value of “\$” is **24**.
- Scan the option code – **2** listed on the fold out back cover.
- Scan the option code – **4** listed on the fold out back cover.
- Scan the system command – **FIN (Finish)** to terminate Preamble setting.
- Scan the system command – **End** to exit the programming mode for normal operation.

HEX/ASCII Reference Table

H L	0	1	2	3	4	5	6	7
0	NUL	DLE	SPACE	0	@	P	`	p
1	SOH	DC1	!	1	A	Q	a	q
2	STX	DC2	"	2	B	R	b	r
3	ETX	DC3	#	3	C	S	c	s
4	EOT	DC4	\$	4	D	T	d	t
5	ENQ	NAK	%	5	E	U	e	u
6	ACK	SYN	&	6	F	V	f	v
7	BEL	ETB	'	7	G	W	g	w
8	BS	CAN	(	8	H	X	h	x
9	HT	EM	)	9	I	Y	i	y
A	LF	SUB	*	:	J	Z	j	z
B	VT	ESC	+	;	K	[	k	{
C	FF	FS	,	<	L	\	l	
D	CR	GS	-	=	M	]	m	}
E	SO	RS	.	>	N	^	n	~
F	SI	US	/	?	O	_	o	DEL

 Example: ASCII “A” → HEX “41”; ASCII “a” → “61”

 : High Byte of HEX Value

 : Low Byte of HEX Value

Host Interface Quick Set Commands



RS232 Serial



USB Com Port Emulation



USB HID Turbo Mode



USB HID Standard Mode ▲

Operation Mode Quick Set Commands



Trigger Mode



Presentation Mode ▲



Multiple Read Mode



Force Mode

Option Codes



0



1



2



3



4



5



6



7



8



9



A



B



C



D



E



F



FIN (Finish)



Abort



END (Exit)

System Commands



Save User Default



**System Information List
(SYSLIST)**



PowerTool Host Link



User Default



Factory Default

- **Factory Default:** After scanning "Factory Default" command, all parameters will be returned to factory default value.
- **Master Default:** After scanning "Master Default" command, the scanner will remain the pre-set parameters of Host Interface Selection, Keyboard Interface Control (except Record Suffix; Preamble; Postamble), Serial Interface Control (except Record Suffix; Preamble; Postamble), and Wand/Laser Emulation Control, the rest of parameters will be returned to default value.
- **User Default:** After scanning "Save User Default" command, all current parameters will be stored to the flash memory. Once you change the parameter and would like to return to previous setting, please scan "User Default".



 www.cino.com.tw

On-Counter Scanner Programming Manual

CINO GROUP

PC WORTH INT'L CO., LTD.

cino